

RSAVP

Version:
v0.1.1

Date:
12.12.2025



Contents

1 Copyright	3
2 Regulatory Compliances	4
2.1 CE and UKCA Notice	4
2.2 FCC PART 15 VERIFICATION STATEMENT	4
2.3 ICES-003 ISSUE 7 VERIFICATION STATEMENT	4
3 Safety Instructions	5
3.1 General	5
3.2 Safety Guidelines	5
3.3 Lithium Battery Caution	6
3.4 Operating Safety	6
3.5 Mounting Installation Precautions	6
3.6 Electrical Safety Instructions	7
4 Product Specifications	8
4.1 Overview	8
4.2 Key Highlights	8
4.3 Technical Details	8
4.4 Important Notes	9
4.5 Dimension Drawings	10
5 Interfaces and Connections	11
5.1 PSU Connection	11
5.2 LED Indicator Explanations	12
6 Hardware Installation	14
6.1 Safety Notice	14
6.2 Opening the Chassis	14
6.3 Install a Graphics Card or Expansion Card	17
6.4 Replacing the Smart Cooling Fans	23
6.5 Changing the filter of the Smart Cooling Fans	26
6.6 Replacing the Power Supply Units	31
6.7 SSD Installation	34
7 Web Configuration	39
7.1 Using BMC Web UI	39
7.2 Default User Name and Password	39
7.3 First Time Wizard Page Introduction	40
7.4 Web UI Layout Introduction	41
7.5 Dashboard	42
8 BIOS Setup	44
8.1 Introduction	44
8.2 Enter BIOS Setup	44
8.3 Main Page	44
8.4 Advanced Page	45
8.5 Trusted Computing	46
8.6 Super IO Configuration	48
8.7 Serial Port Console Redirection	49
8.8 PCI Subsystem Settings	52

8.9	USB Configuration	52
8.10	Network Stack Configuration	54
8.11	NVMe Configuration	55
8.12	Control PXE Boot	55
8.13	Intel VROC	56
8.14	Platform Configuration	57
8.15	Socket Configuration	57
8.16	Server Mgmt	68
8.17	Security	72
8.18	Boot Menu	74
8.19	Save and Exit Menu	75
8.20	Intel® RAID Key Configuration	77

1 Copyright

Copyright and Trademarks, 2025 Publishing. All Rights Reserved

This manual, software and firmware described in it are copyrighted by their respective owners and protected under the laws of the Universal Copyright Convention. You may not reproduce, transmit, transcribe, store in a retrieval system, or translate into any language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, biological, molecular, manual, or otherwise, any part of this publication without the express written permission of the publisher.

All products and trade names described within are mentioned for identification purpose only. No affiliation with or endorsement of the manufacturer is made or implied. Product names and brands appearing in this manual are registered trademarks of their respective companies. The information published herein has been checked for accuracy as of publishing time. No representation or warranties regarding the fitness of this document for any use are made or implied by the publisher.

We reserve the right to revise this document or make changes to any product, including circuits and/or software described herein, at any time without notice and without obligation to notify any person of such revision or change. These changes are intended to improve design and/or performance.

We assume no responsibility or liability for the use of the described product(s). This document conveys no license or title under any patent, copyright, or mask work rights to these products and makes no representations or warranties that these products are free from patent, copyright, or mask work right infringement, unless otherwise specified.

Applications described in this manual are for illustration purposes only. We make no representation or guarantee that such applications will be suitable for the specified use without further testing or modification.

2 Regulatory Compliances

This documentation is preliminary and subject to change

2.1 CE and UKCA Notice

This device complies with the requirements of the CE directive and UKCA regulations.

Low Voltage Directive 2014/35/EU + Electrical Equipment Safety Regulations 2016 (SI 2016 No 1101)

- applicable standards are pending

EMC Directive 2014/30/EU + Electromagnetic Compatibility Regulations 2016

- applicable standards are pending

RoHS 2 Directive 2011/65/EU & 2015/863/EU + RoHS 2 Directive 2020 No. 1647

- Exemptions pending



2.2 FCC PART 15 VERIFICATION STATEMENT

WARNING

This equipment has been tested and found to comply with the limits for a Class (pending) digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Notice: The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

2.3 ICES-003 ISSUE 7 VERIFICATION STATEMENT

CAN ICES3(A)/NMB3(A)

This device complies with CAN ICES-003 Issue 7 Class (pending). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

3 Safety Instructions

3.1 General

Please read these safety instructions carefully and retain them for future reference.

1. This equipment is to be installed for operation in an environment with maximum ambient temperature below 40°C.
2. The openings on the enclosure are for air convection to protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
3. Carefully mount the equipment into the rack, in such manner, that it won't be hazardous due to uneven mechanical loading. Place this equipment on a stable surface when install. A drop or fall could cause injury.
4. Make sure the voltage of the power source is within the specification on the label when connecting the equipment to the power outlet. The current load and output power of loads shall be within the specification.
5. This equipment must be connected to reliable grounding before using. Pay special attention to power supplied other than direct connections, e.g. using of power strips.

3.2 Safety Guidelines

Follow these guidelines to ensure general safety:

1. Keep the chassis area clear and dust-free during and after installation.
2. Do not wear loose clothing or jewelry that could get caught in the chassis. Fasten your tie or scarf and roll up your sleeves.
3. Wear safety glasses if you are working under any conditions that might be hazardous to your eyes.
4. Do not perform any action that creates a potential hazard to people or makes the equipment unsafe.
5. Disconnect all power by turning off the power and unplugging the power cord before installing or removing a chassis or working near power supplies
6. Do not work alone if potentially hazardous conditions exist.
7. Never assume that power is disconnected from a circuit; always check the circuit.
8. Have the equipment checked by service personnel if:
 - The power cord or plug is damaged.
 - Liquid has penetrated the equipment.
 - The equipment has been exposed to moisture in a condensation environment.
 - The equipment does not function properly, or you cannot get it to work by following the user manual.
 - The equipment has been dropped and damaged.

3.3 Lithium Battery Caution

1. **There is risk of explosion** if the battery is replaced by an incorrect type.
2. Dispose of used batteries according to the instructions.
3. Installation should be conducted only by a trained electrician or only by an electrically trained person who knows all installation procedures and device specifications which are to be applied.
4. Do not carry the handle of power supplies when moving to another place.
5. Please conform to your local laws and regulations regarding safe disposal of lithium battery.
6. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery can result in an explosion.
7. Leaving a battery in an extremely high temperature environment can result in an explosion or the leakage of flammable liquid or gas.
8. A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.

3.4 Operating Safety

1. Electrical equipment generates heat. Ambient air temperature may not be adequate to cool equipment to acceptable operating temperatures without adequate circulation. Be sure that the room in which you choose to operate your system has adequate air circulation.
2. Ensure that the chassis cover is secure. The chassis design allows cooling air to circulate effectively. An open chassis permits air leaks, which may interrupt and redirect the flow of cooling air from internal components.
3. **Electrostatic discharge (ESD) can damage equipment** and impair electrical circuitry. ESD damage occurs when electronic components are improperly handled and can result in complete or intermittent failures. Be sure to follow ESD-prevention procedures when removing and replacing components to avoid these problems.
4. **Wear an ESD-preventive wrist strap**, ensuring that it makes good skin contact. If no wrist strap is available, ground yourself by touching the metal part of the chassis.
5. Periodically check the resistance value of the antistatic strap, which should be between 1 and 10 megohms ($M\Omega$).

3.5 Mounting Installation Precautions

The following should be put into consideration for rack-mount or similar mounting installations:

1. **Do not install and/or operate this unit in any place that flammable objects are stored or used in.**
2. The installation of this product must be performed by trained specialists; otherwise, a non-specialist might create the risk of the system's falling to the ground or other damages.
3. Elevated Operating Ambient - If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (T_{ma}) specified by the manufacturer.
4. Reduced Air Flow - Installation of the equipment in a rack should be such that the amount of airflow required for safe operation of the equipment is not compromised.
5. Mechanical Loading - Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.
6. Circuit Overloading - Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

7. Reliable Grounding - Reliable grounding of rack mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g. use of power strips).
8. Suitable for installation in Information Technology Rooms in accordance with Article 645 of the National Electrical Code and NFPA 75.
9. Equipment is intended for installation in Restricted Access Location / Les matériels sont destinés à être installés dans des EMPLACEMENTS À ACCÈS RESTREINT.


CAUTION: Stability hazard - The rack may tip over causing serious personal injury Before extending the rack to the installation position, read the installation instructions. Do not put any load on the slide-rail mounted equipment in the installation position. Do not leave the slide-rail mounted equipment in the installation position.

DANDER: d'instabilité - Le rack peut basculer et provoquer des blessures corporelles graves Avant d'étendre le rack en position d'installation, lire les instructions d'installation. Ne pas charger l'équipement monté sur rail de glissière en position d'installation. Ne pas laisser l'équipement monté sur rail de glissière en position d'installation.

3.6 Electrical Safety Instructions

Before turning on the device, ground the grounding cable of the equipment. Proper grounding (grounding) is very important to protect the equipment against the harmful effects of external noise and to reduce the risk of electrocution in the event of a lightning strike. To uninstall the equipment, disconnect the ground wire after turning off the power. A ground wire is required and the part connecting **the conductor must be greater than 4 mm² or 10 AWG**.

1. **This equipment must be grounded.** The power cord for product should be connected to a socket-outlet with earthing connection.
2. Suitable for installation in Information Technology Rooms in accordance with Article 645 of the National Electrical Code and NFPA 75.
3. The machine can only be used in a restricted access location and has installation instructions by a skilled person.

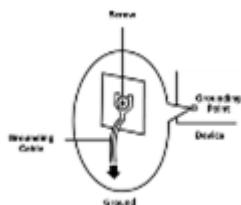

4 Product Specifications

4.1 Overview

This high-performance server platform is designed for demanding enterprise and industrial applications. Featuring the latest Intel® Xeon®6 Processor with advanced security acceleration and robust networking capabilities, it ensures reliability, scalability, and efficiency. The system supports up to 512GB DDR5 ECC memory, multiple PCIe Gen5 expansion slots, and flexible storage options including NVMe and M.2. Built for harsh environments, it offers wide temperature tolerance, redundant power supplies, and compliance with stringent safety and EMC standards.

4.2 Key Highlights

- Processor: Intel® Xeon®6 6710E, 64 cores / 64 threads, 2.4GHz
- Memory: DDR5 ECC, up to 512GB across 8 DIMM slots
- Networking: Dual 1GbE and dual 10GbE ports with SR-IOV support
- Storage: 4x U.2 NVMe hot-swappable bays + 1x M.2 PCIe Gen5 slot
- Expansion: PCIe Gen5 slots for high-speed add-on cards
- Environmental: Operates from -40°C to 55°C, IP30-rated chassis
- Certifications: CE/UKCA, FCC Class A, RoHS, EN50121-4, IEC-61850-3

4.3 Technical Details

Feature	Specification	Details
Processor	CPU	Intel® Xeon®6 Processor 6710E 64C/64T, 2,4GHz Single Socket
	BIOS	AMI SPI Flash BIOS
	Security Acceleration	Intel® QuickAssist Technology
Memory	System Memory	DDR5, ECC, up to 512GB
	Socket	8x 288-Pin DIMM
Networking	Ethernet	2x 1GbE RJ45, 2x 10GbE RJ45 w/SRIOV
	LOM/OOB	1x RJ45 IPMI LOM Port
Storage	HDD/SSD	4x 2.5" U.2 NVMe Hot-Swappable Drive Bays
	M.2 Storage	1x M.2 2280/22110 M-Key for NVMe (PCIe Gen5)
Expansion	PCIe	2x FHFL (Double-Width) PCIe Gen5*16
		1x FHHL (Single-Width) PCIe Gen5*8
		1x FHHL (Single-Width) PCIe Gen5*4
I/O Interfaces	Button	1x Reset Button
	LED Indicators	Power/Status/HDD/LAN/LOM LED Indicator
	USB	4x USB 3.1 Ports & 1x USB 3.1 Port with Key Lock
	Console Port	1x 1GbE RJ45 Console Port
	Display	1x VGA Port

continues on next page

Table 1 – continued from previous page


Feature	Specification	Details
Miscellaneous	Watchdog	Yes
	Internal RTC	Yes, with Li Battery
	TPM	TPM 2.0 Onboard
Power	Type/Watts	Dual power Input Up to 750W each
	Input	100~240VAC / 110~240VDC
Cooling	Processor	Passive CPU Heatsink
	System	3x Smart Cooling Fans
Environmental	Temperature	-40°C ~ 55°C
	Humidity (RH)	Operating: 5% ~ 90%
		Non-Operating: 5%~95%
Mechanical	Dimension	438 x 131.8 x 455 mm
	Weight	TBD
	Form Factor	3U 19" Rackmount, IP30
Certifications	EMC	CE/UKCA, FCC Class A, RoHS, MTBF
	Safety	EN50121-4, UL+CB, IEC-61850-3, IEEE 1613
Driver Support	OS	Linux

4.4 Important Notes


- Operating Conditions: Ensure proper airflow and cooling in rack environments to maintain optimal performance within specified temperature and humidity ranges.
- Power Redundancy: Dual power inputs are recommended for high-availability deployments.
- Firmware Updates: Regular BIOS and firmware updates are essential for security and stability.
- Storage Configuration: NVMe drives should be installed according to manufacturer guidelines for hot-swapping.
- Compliance: Verify local regulatory requirements for EMC and safety certifications before deployment.
- Maintenance: Replace Li battery for RTC as per recommended lifecycle to avoid timekeeping issues.

4.5 Dimension Drawings

- Length-455 cm
- Height-131.8 cm
- Width-438 cm

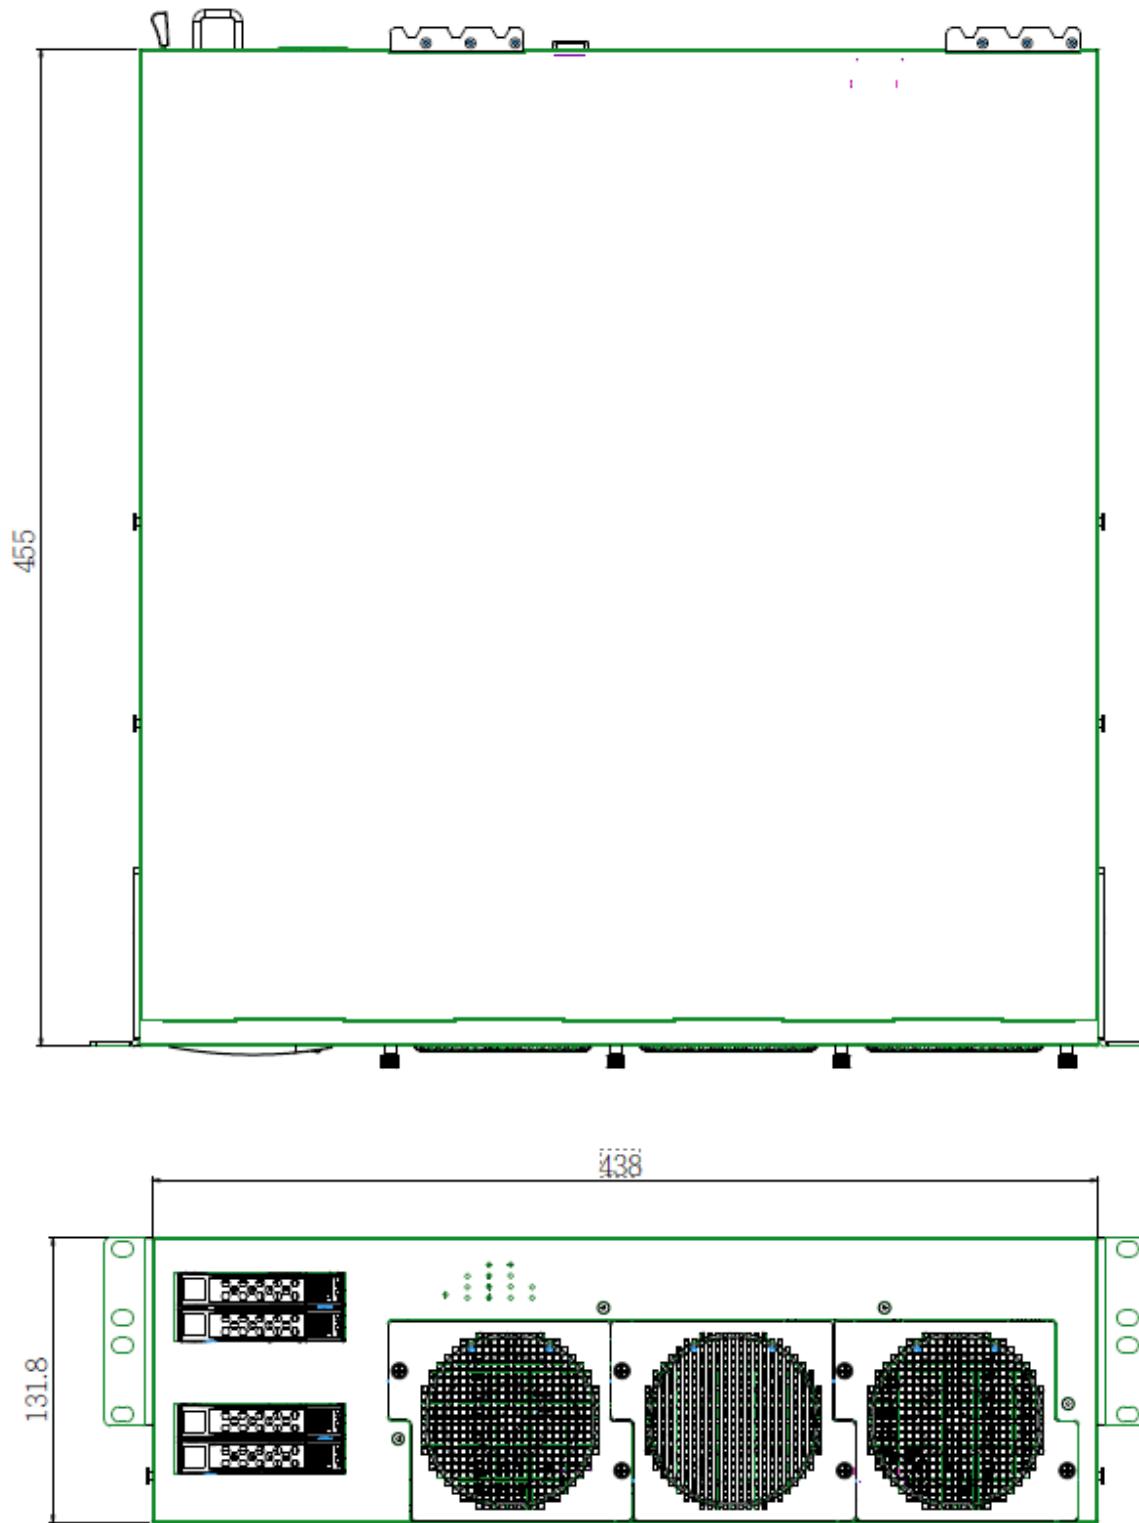


5 Interfaces and Connections

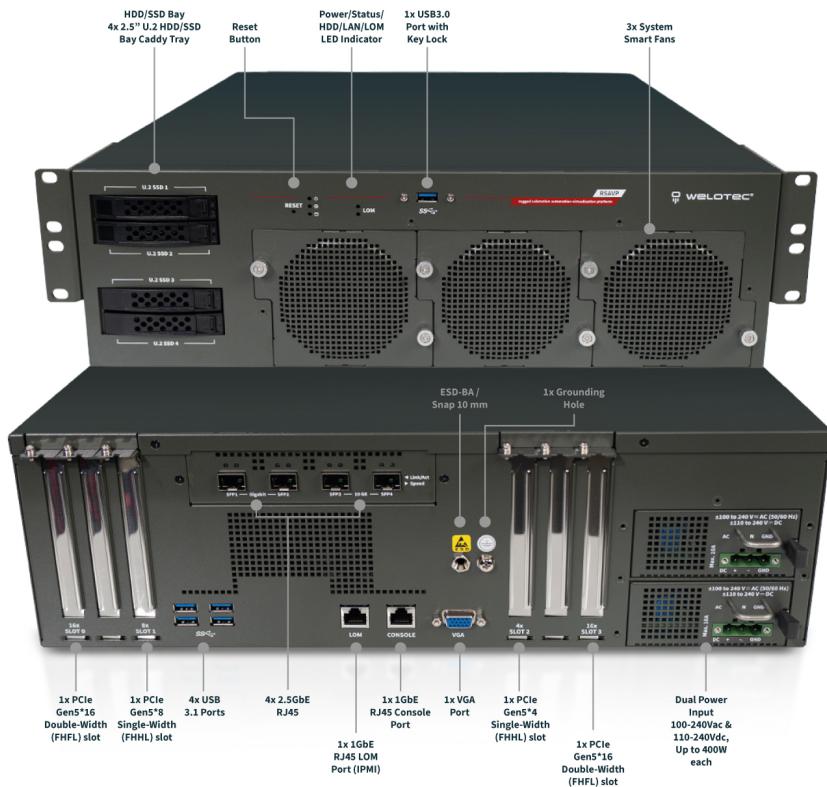


5.1 PSU Connection

- The terminal block consists of three main connection points labeled “+”, “-”, and “GND”. These are used for power and grounding:
 - “+” (Positive): Connect the positive voltage supply.
 - “-” (Negative): Connect the negative voltage or return line.
 - “GND” (Ground): Provides a grounding point for safety and signal reference.

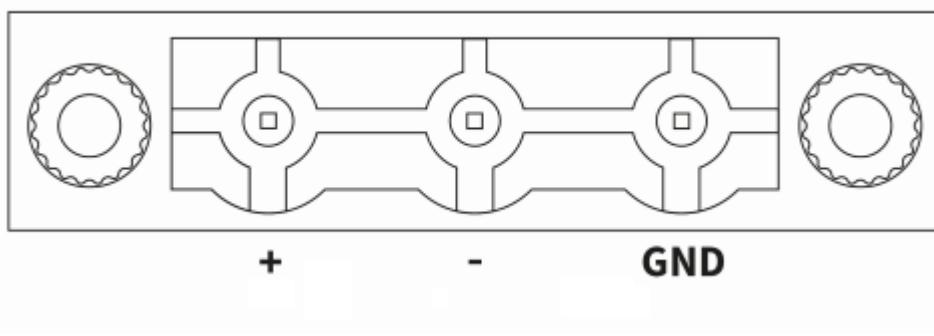

5.2 LED Indicator Explanations

5.2.1 System Power / Status / Storage Activity

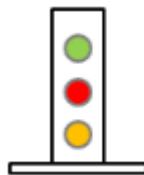

Green : Power

Green / Red : Status


Amber : HDD

LED	Color on Board	LED Action	Description
POWER	Green	Steady	System Power ON
	Off	N/A	Power OFF
STATUS	Green	Steady	Controlled by GPIO
	Red	Steady	Controlled by GPIO
	Off	N/A	Controlled by GPIO (Default) or Power OFF
Storage	Amber	Blinking	Blinking indicates HDD activity, Include SATA/NVME
	Off	N/A	No data access or No power on

5.2.2 HDD Tray LED

LED	Color	LED Action	Description
POWER	Green	Steady	HDD/SSD Power ON
	Off	N/A	Power OFF
STATUS	Yellow	Blinking	Blinking indicates HDD activity, Include SATA / NVME Storage
	Off	N/A	No data access or Power OFF

5.2.3 RJ-45 LAN LED

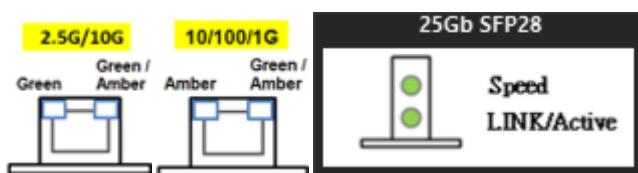

5.2.4 1Gb RJ-45 Define:

Speed	Amber (Link/Active)	style="color:orange">Amber (Speed)
10M	Blinking / Data access	OFF
100M	Blinking / Data access	ON (Green)
1G	Blinking / Data access	On (Amber)

1. When cable is plug-in and network is linked. Both LED lights will be bright. The behavior is as defined.
2. Without the Cable plug-in, the LED should be off
3. If LAN Driver controls the LED, the behavior will follow the driver

5.2.5 2.5Gb RJ-45 Define:

Speed	Green (Link/Active)	Green/Amber (Speed)
10/100M	Blinking / Data access	OFF
1G	Blinking / Data access	ON (Amber)
2.5G	Blinking / Data access	ON (Green)

1. When cable is plug-in and network is linked. Both LED lights will be bright. The behavior is as defined.
2. Without the Cable plug-in, the LED should be off
3. If LAN Driver controls the LED, the behavior will follow the driver

5.2.6 10Gb RJ-45 Define:

Speed	Green (Link/Active)	Green/Amber (Speed)
100M	Blinking / Data access	OFF
1/2.5/5G	Blinking / Data access	ON (Amber)
10G	Blinking / Data access	ON (Green)

1. When cable is plug-in and network is linked. Both LED lights will be bright. The behavior is as defined.
2. Without the Cable plug-in, the LED should be off
3. If LAN Driver controls the LED, the behavior will follow the driver

5.2.7 25Gb SFP28 Define:

Speed	Green (Link/Active)	Amber/Green (Speed)
10G	Blinking / Data access	ON (Green)
25G	Blinking / Data access	ON (Amber)
Non-Link	OFF	OFF

1. When cable is plug-in and network is linked. Both LED lights will be bright. The behavior is as defined.
2. Without the Cable plug-in, the LED should be off
3. If LAN Driver controls the LED, the behavior will follow the driver


6 Hardware Installation


6.1 Safety Notice

To reduce the risk of **personal injury, electric shock, or damage to the system**, please remove all power connections to shut down the device completely.

6.2 Opening the Chassis

1. Power off the system. Loosen the two screws on the rear panel and one screw on each side.

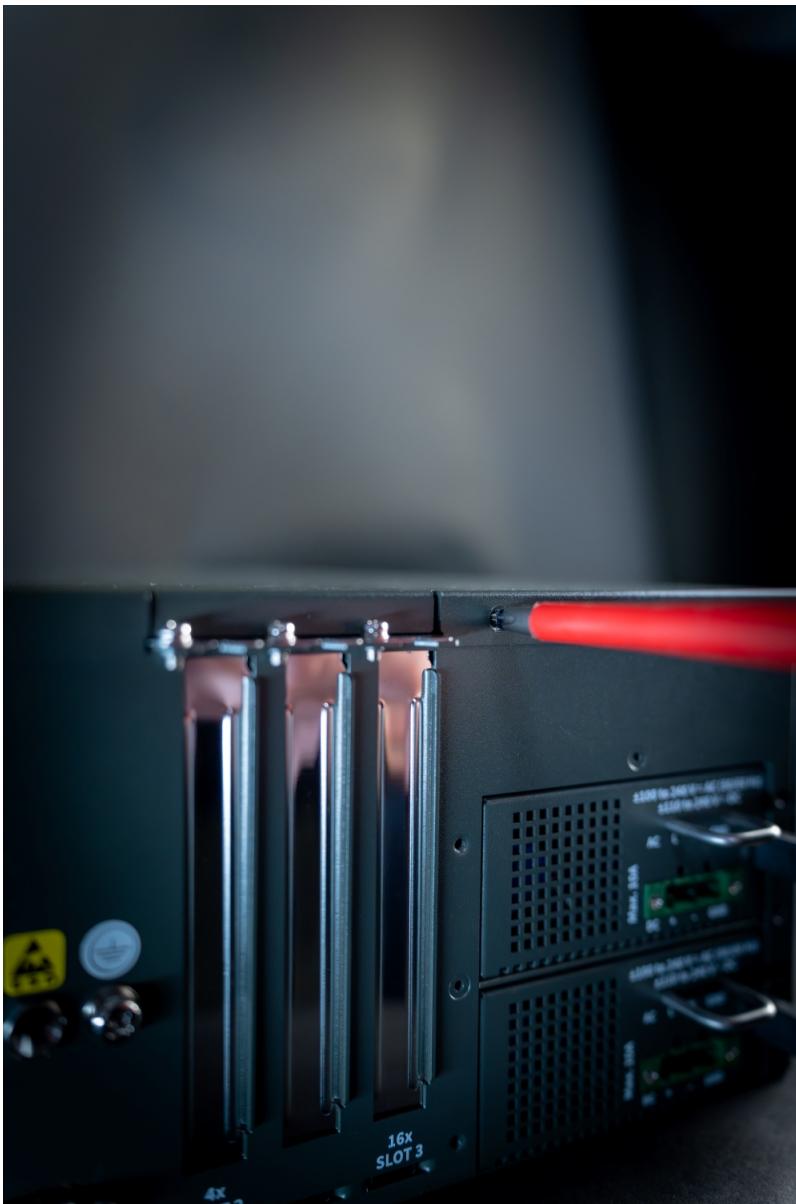

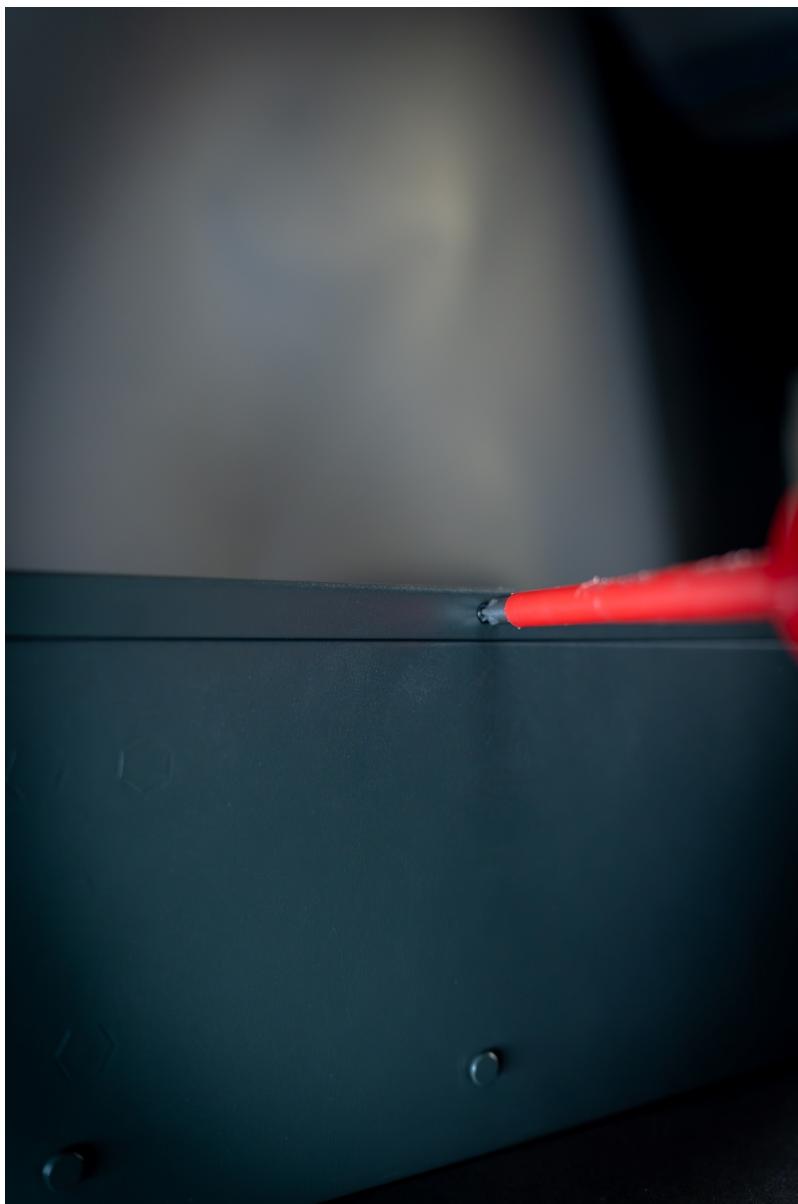

2. Lift the cover up to remove.



3. Gently release the latch by pulling it.
4. Ensure the latch is fully disengaged before lifting or removing the cover to avoid damage.



6.3 Install a Graphics Card or Expansion Card

1. Power Off and Prepare

- Shut down the system and disconnect the power cable.
- Ground yourself to prevent electrostatic discharge (ESD). Use an ESD strap if available.
- Gather a screwdriver and the card you want to install.

2. Open the Chassis


- Remove the screws or release the latch securing the chassis cover.
- Carefully remove the cover to access the internal components.

3. Locate the PCIe Slots

- Identify the appropriate PCIe slot for your card (e.g., x16 for graphics cards, x4 for smaller expansion cards).


4. Remove the Slot Cover

- Unscrew and remove the metal bracket covering the slot on the rear panel
- Keep the screws for later use.

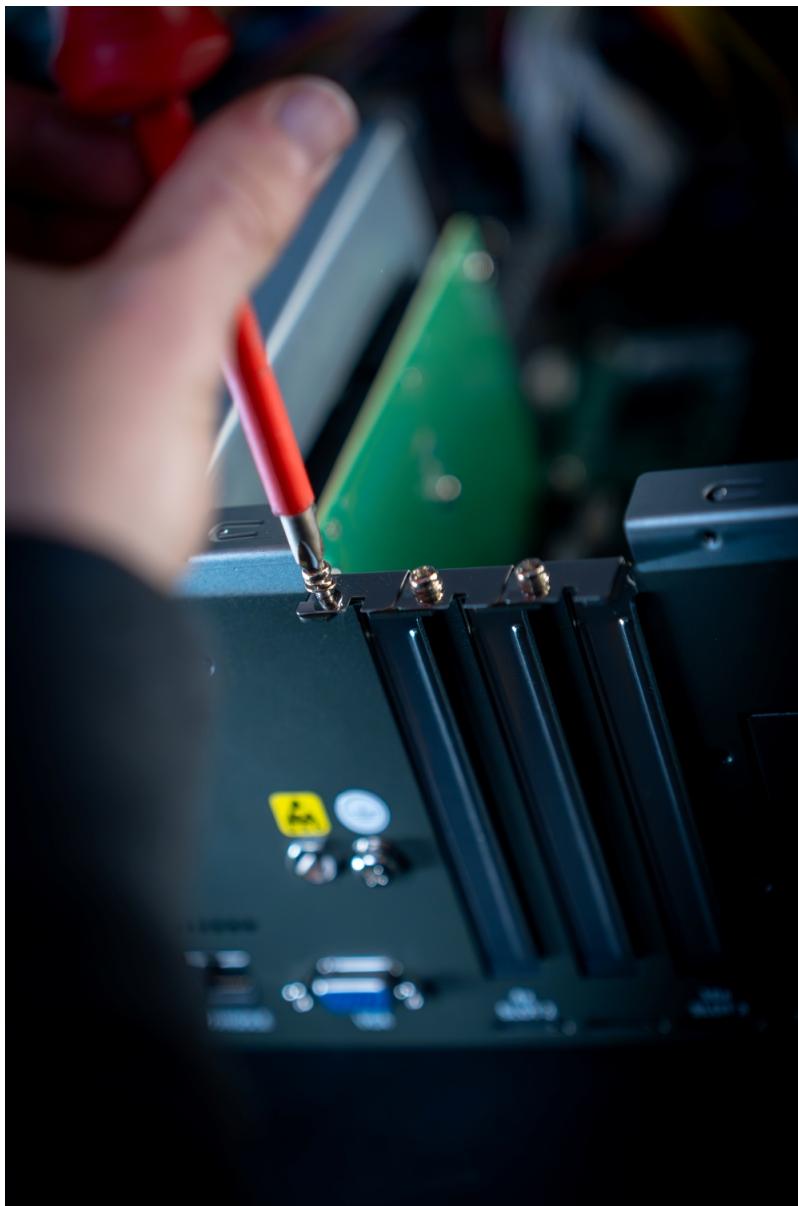

5. Insert the Card

- Align the card's connector with the PCIe slot.

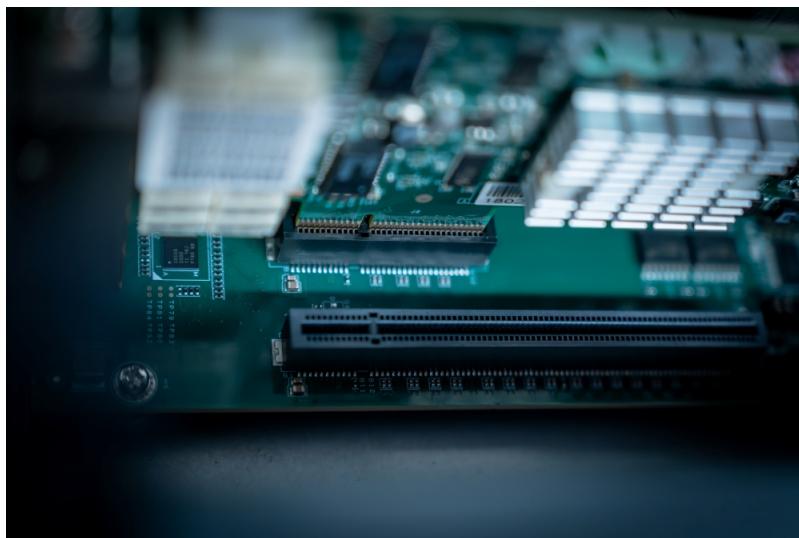

- Ensure the card's bracket fits into the rear panel opening.




- Press down firmly until the card is fully seated in the slot.




6. Secure the Card

- Use the screws you removed earlier to fasten the card's bracket to the chassis (see fourth and fifth images).

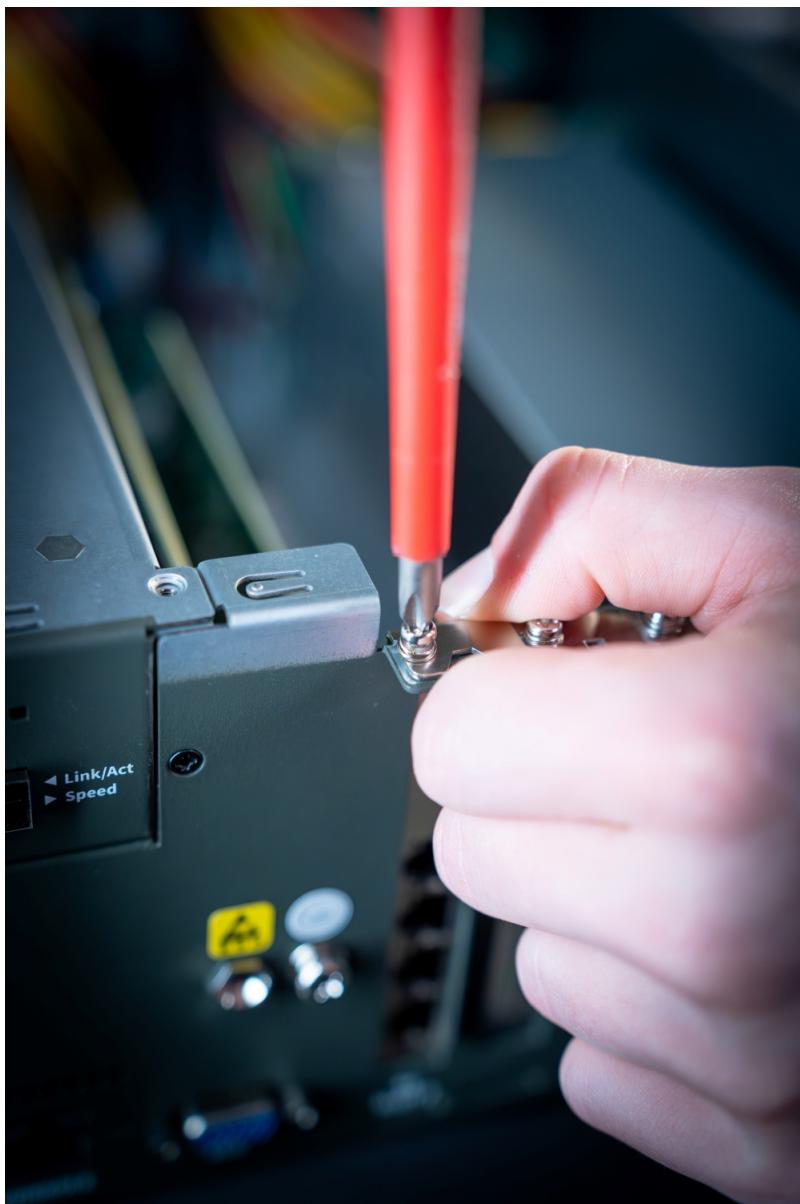

- Make sure the card is stable and does not move.

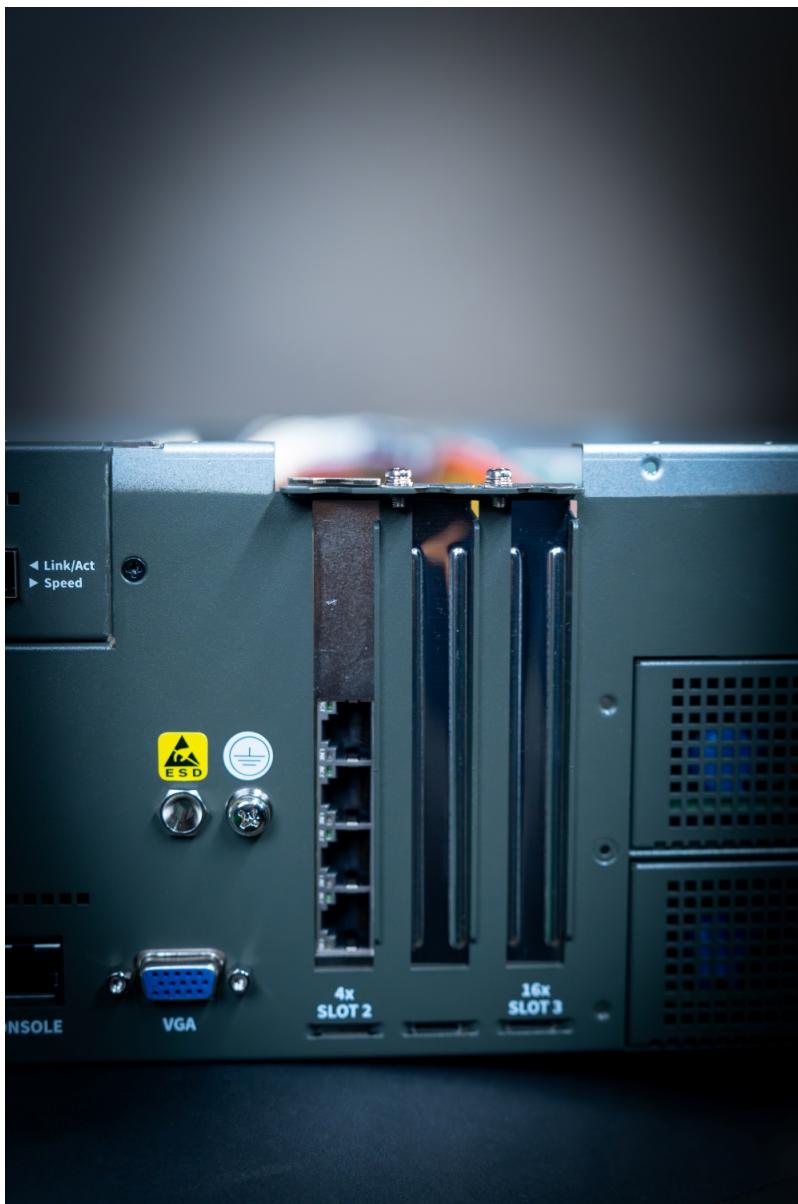

6.4 Replacing the Smart Cooling Fans

Cooling Fans may wear down eventually, please refer to the steps below for replacing smart cooling fans.

1. Power off the system and locate the cooling fans on the front panel.



2. Using a screwdriver, loosen the two lock-screws of the fan you would like to replace



3. Hold onto the lock screw and gently pull out the cooling fan



4. Insert a new fan into the fan bracket and push until it clicks into place and screw in the two lock-screws.



6.5 Changing the filter of the Smart Cooling Fans

Follow these steps to replace the filter:

1. Remove the Smart Cooling Fan by loosening the two mounting screws by hand or with a screwdriver.
2. Carefully pull the Smart Cooling Fan out of the device.



3. Remove the screws on the top and bottom of the Smart Cooling Fan housing.



4. Release the cover by gently unclipping it.




5. Take out the filter mat.



6. Insert a new filter mat and ensure it is properly seated in the corners.

7. Align the cover with the clips and snap it back into place.

8. Reinstall all previously removed screws.

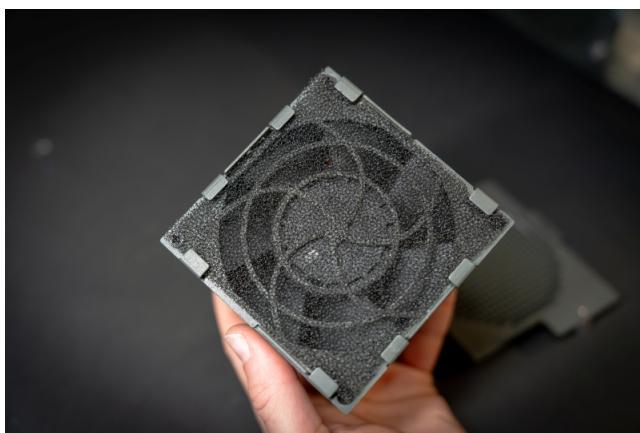

9. Align the plug of the Smart Cooling Fan with the connector inside the device.



10. Slide the Smart Cooling Fan back into the device.



11. Secure the Smart Cooling Fan by tightening the mounting screws.



6.6 Replacing the Power Supply Units

Power supply units can wear down over time. The RSAVP is compatible with dual power input up to 750W each, based on your chosen configuration. Ensure to use power supply units that align with these capacities.

1. Power off the system and locate the power supply units on the rear panel.
2. Grip the handle and press the lever inward to pull out the power supply unit.





3. Insert a new power supply unit and push until it clicks into place.




6.7 SSD Installation


1. Press the latch to release the handle.



2. Pull the handle to release the cover.

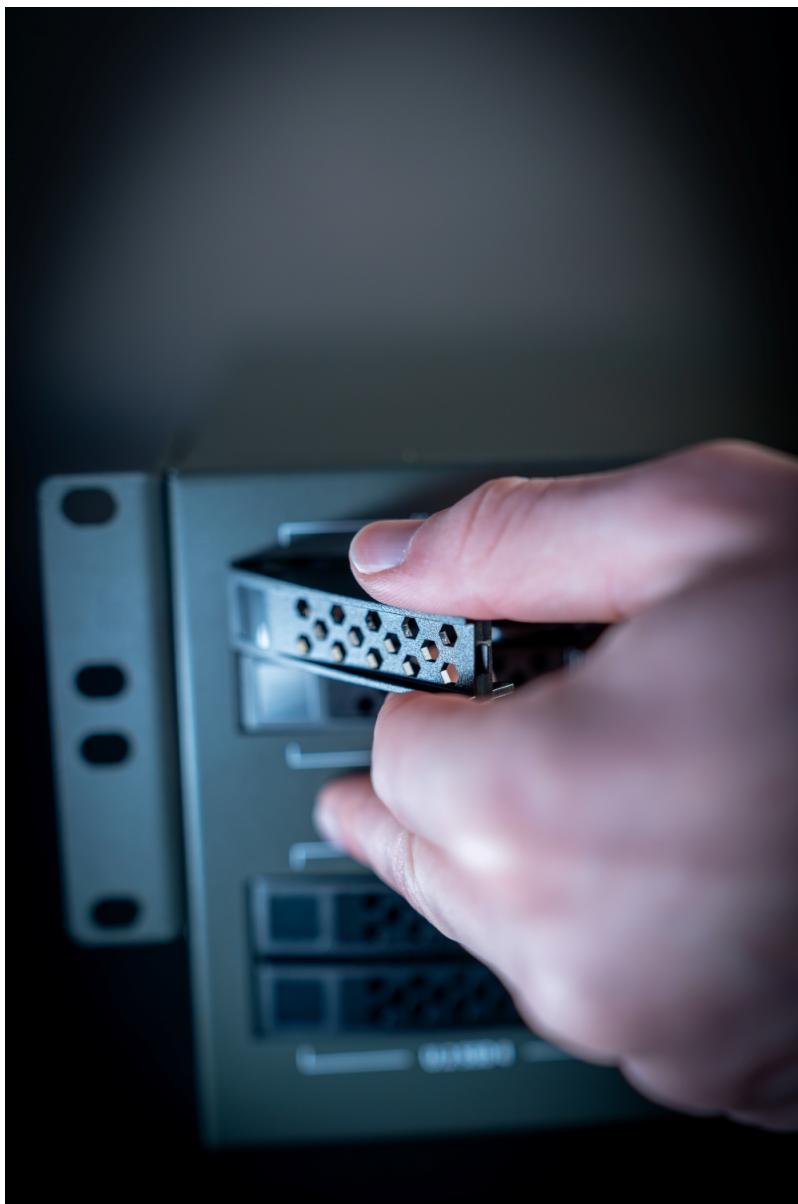

3. Use screws to fasten the SSD to the tray.

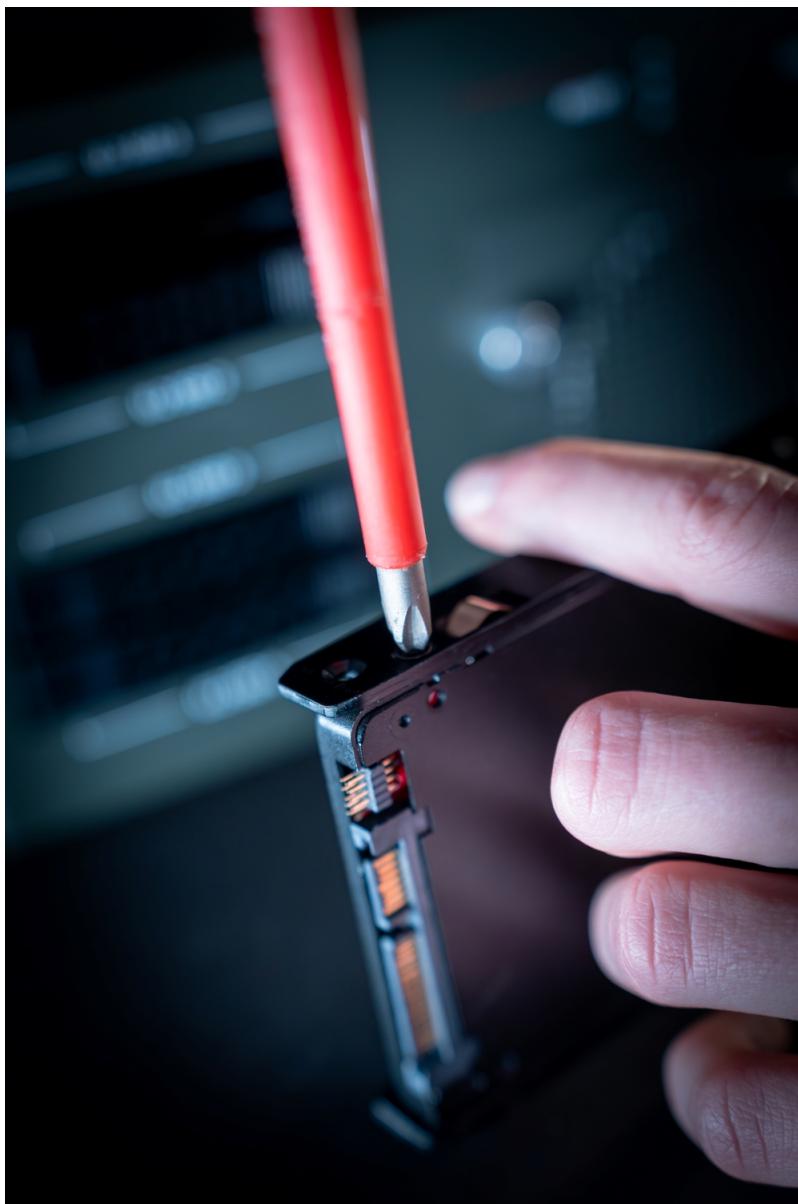


4. Ensure the SSD is firmly attached and does not move.
5. Align the tray with the bay slot
6. Push the tray gently until it clicks into place




7 Web Configuration

7.1 Using BMC Web UI

In the address bar of your Internet browser, input the IP address of the remote server to access the BMC interface of that server.

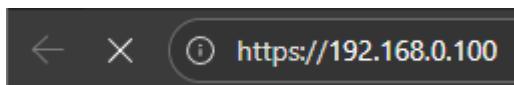

Initial access of BMC prompts you to enter the User Name and Password. A screenshot of the login screen is given below:

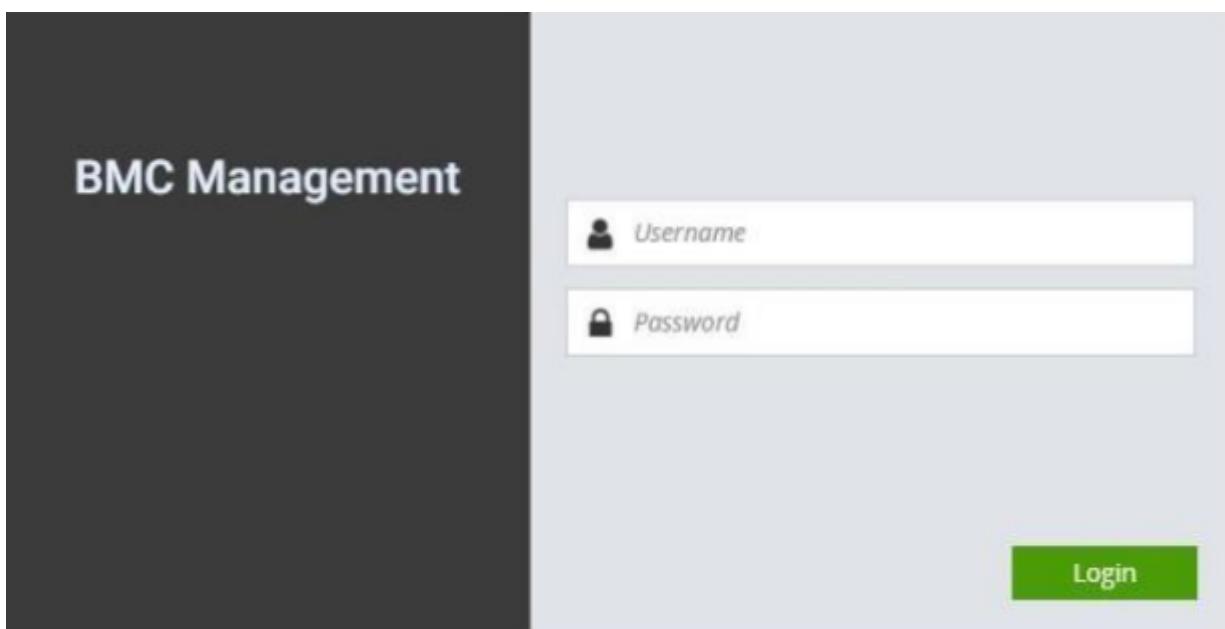

- **Username:** Enter your username in this field.
- **Password:** Enter your password in this field.
- **Sign me in:** After entering the required credentials, click the Sign me in to log in to Web UI.

Note: (1) If not specified, the default IP to access BMC is <https://192.168.0.100>.

(2) Please use https to access Web UI.

7.2 Default User Name and Password

Username: admin

Password: admin

The default username and password are in lower-case characters. When you log in using the default username and password, you will get full administrative rights, and it will ask you to change the default password once you log in. The dialog is shown below:


Change the password for the default user. The password must contain 8 to 16 characters.

Password must follow these rules:

1. Cannot contain all of the user's account name.
2. Includes three of the following four categories:
 - a. English uppercase characters.
 - b. English lowercase characters.
 - c. Numbers 0 to 9.
 - d. Non-alphanumeric characters (~!@#\$%^&*).

OK


Clicking on OK will take you to set a password.

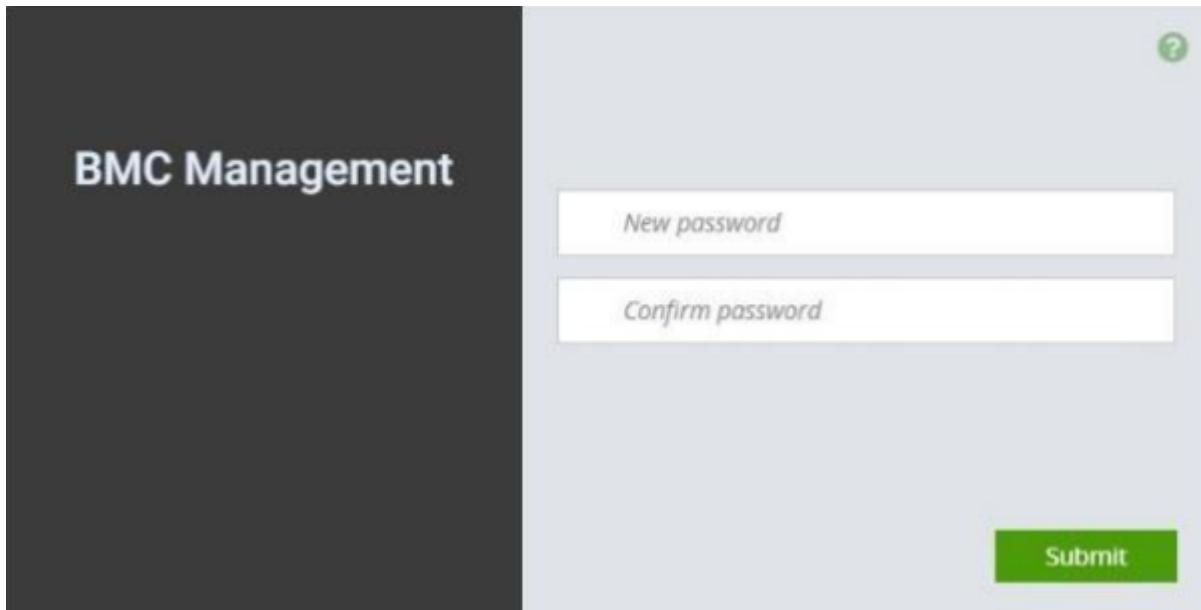

Change the default password – Set password

7.3 First Time Wizard Page Introduction

1. After the first-time login, you will see first time wizard welcome page as the following picture. Please press the “Next” button and configure your BMC step by step.
2. On the “IPv4”, “IPv6” and “DNS” pages, you could specify the hostname and network settings of BMC.
3. On the “Remote Control” page, you could specify allowed IP region which could access KVM and Remote media web pages.
4. On the “Date and Time” page, you could specify the NTP and time settings.

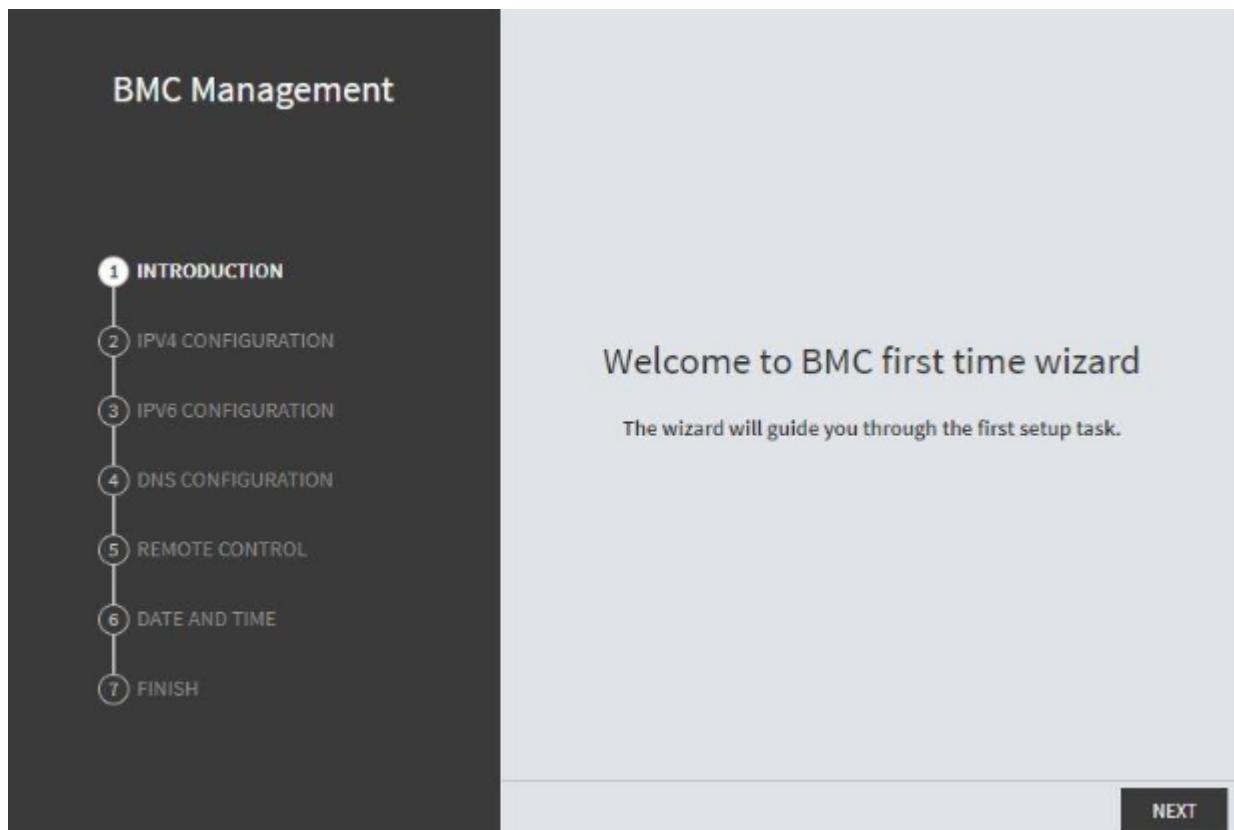


5. In the final page, please press “Finish” button to complete the first-time wizard. BMC will be rebooted and apply new settings. You could reconnect to the WebUI after a few minutes.

7.4 Web UI Layout Introduction

The BMC Web UI consists of various menu items:

7.4.1 Menu Bar

A screenshot of the menu bar is shown below, please select the page you would like to navigate.

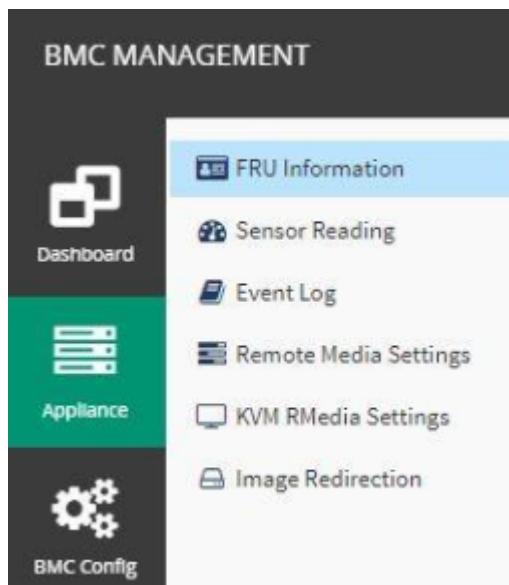


7.4.2 Quick Button and Logged-in User

The user information and quick buttons are located at the top right of the Web UI.



Logged-in user information: Click the User to view the logged-in user information.

A screenshot of the logged-in user information is shown below:

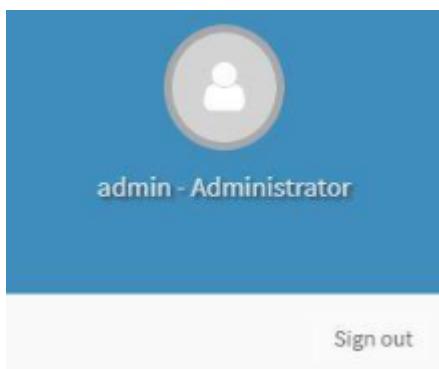

The logged-in user information shows the logged-in user's username, user privilege, with the quick buttons allowing you to perform the following functions:

- Refresh: reload the current page.
- Sign out: log out of the Web UI.

7.4.3 Logged-in User and its Privilege Level

This option shows the logged-in username and privilege. There are four kinds of privileges:

- User: Only valid commands are allowed.

Operator: All BMC commands are allowed except for the configuration commands that can change the behavior of the out-of-hand interfaces.


- Administrator: All BMC commands are allowed.
- No Access: Login access denied.

7.4.4 Help

Help: The Help icon is located at the top right of each page in Web UI. Click this help icon to view more detailed field descriptions.

7.5 Dashboard

The dashboard page gives the overall information about the status of a device. To open the Dashboard page, click Dashboard from the menu bar. A sample screenshot of the Dashboard page is shown below:

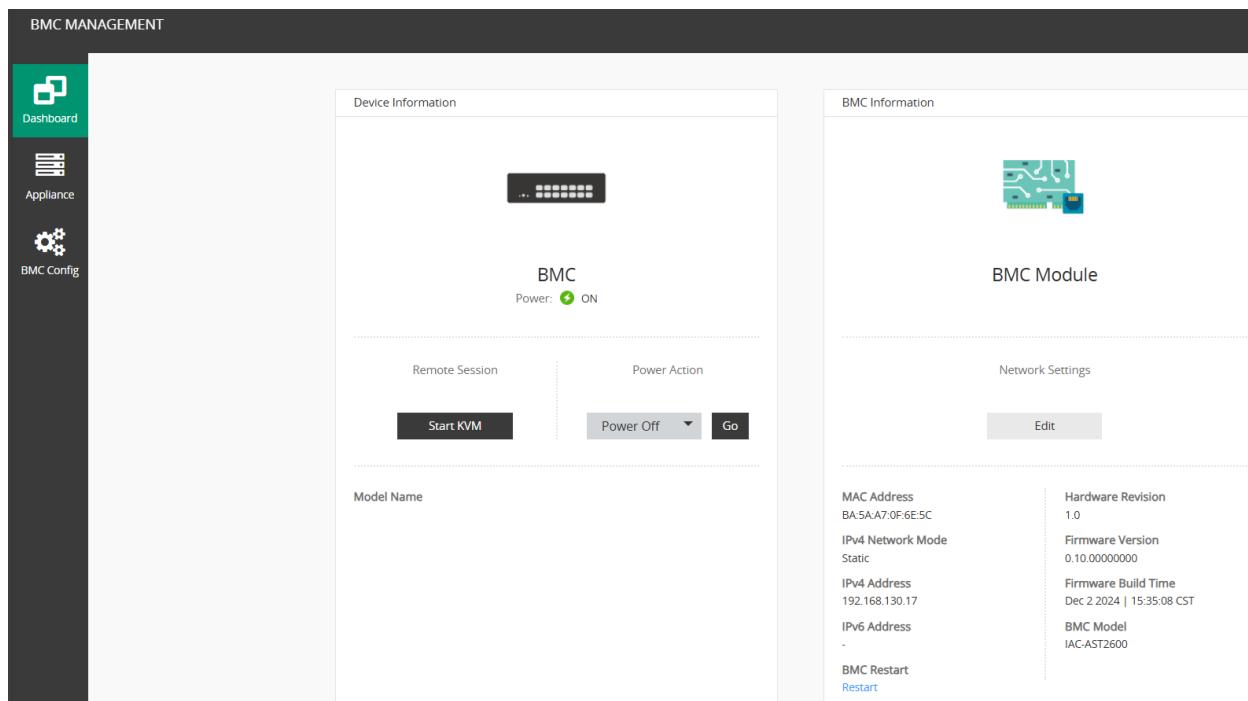

The screenshot shows the BMC Management Dashboard. The left sidebar has three items: Dashboard (selected), Appliance, and BMC Config. The main area is divided into two sections: Device Information and BMC Information.

Device Information: Shows a small icon of a server rack, the text "BMC", and "Power: ON". It includes buttons for "Start KVM", "Power Off", and "Go".

BMC Information: Shows a small icon of a circuit board, the text "BMC Module", and "Network Settings". It includes an "Edit" button and a table with the following data:

MAC Address BA:5A:A7:0F:6E:5C	Hardware Revision 1.0
IPv4 Network Mode Static	Firmware Version 0.10.00000000
IPv4 Address 192.168.130.17	Firmware Build Time Dec 2 2024 15:35:08 CST
IPv6 Address -	BMC Model IAC-AST2600
BMC Restart Restart	

A brief description of the Dashboard page is given below:

- **Device Information** This indicates the system information such as power status, model name and serial number. You could also execute power action and remote KVM here.
- **BMC Information** This indicates the BMC module information such as network settings, firmware info, and model name.

8 BIOS Setup

8.1 Introduction

The system has AMI BIOS built-in, with a SETUP utility that allows users to configure required settings or to activate certain system features. Pressing Tab or Del key immediately allows you to enter the Setup Utility.

8.2 Enter BIOS Setup


To enter the BIOS setup utility, simply follow the steps below:

1. Boot up the system
2. Press Del during the boot-up if you connect a keyboard to this unit. But if you connect a PC to this unit through console USB/Serial connection, then press Tab. Your system should be running POST (Power-On-Self-Test) upon booting up.
3. Then you will be directed to the BIOS main screen.
4. Instructions of BIOS navigations.

Control Keys	Description
→←	select a setup screen, for example, [Main],[Advanced] and [Platform]
↑↓	select an item/option on a setup screen
Enter	select an item/option or enter a sub-menu
+/-	to adjust values for the selected setup item/option
F1	to display General Help screen
F2	to retrieve previous values
F3	to load optimized default values
F4	to save configurations and exit BIOS
Esc	exit the current screen

8.3 Main Page


Setup Main Page contains BIOS information and project version information.

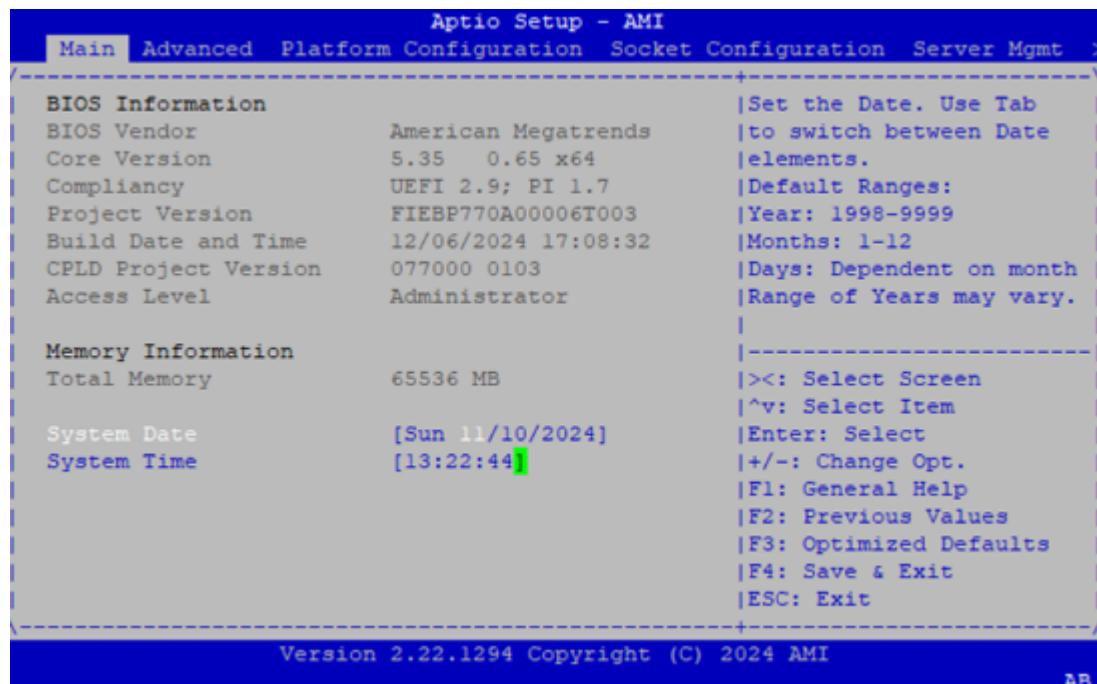

Item	Description
BIOS Information	BIOS Vendor: American Megatrends Core Version: AMI Kernel version, CRB code base, X64 Compliancy: UEFI version, PI version BIOS Version: BIOS release version Build Date and Time: MM/DD/YYYY CPLD Version(M): MB CPLD release version CPLD Version(S): BMC Card CPLD release version Access Level: Administrator / User
Memory Information	Total Memory: by case
System Date	To set the Date, use Tab to switch between Date elements. Default range of Year: 2005-2099 Default range of Month: 1-12 Days: dependent on Month.
System Time	To set the Date, use Tab to switch between Date elements.


8.4 Advanced Page

Select the Advanced menu tab from the BIOS setup screen to enter the “Advanced” setup screen. Users can select any of the items in the left frame of the screen

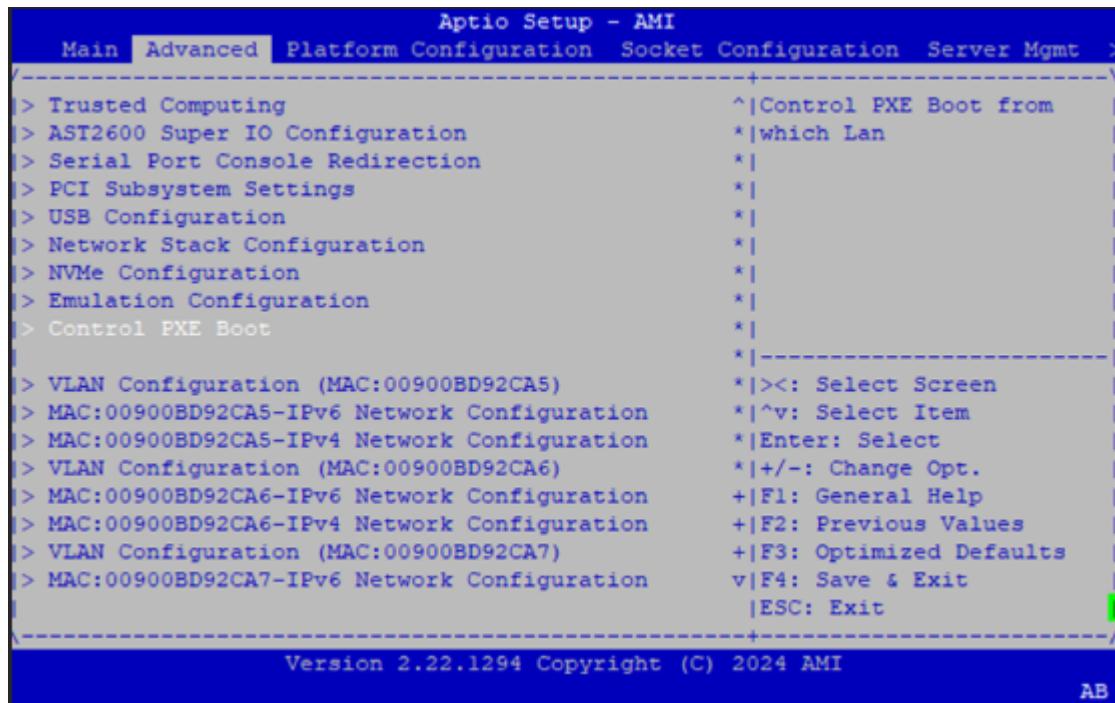


8.5 Trusted Computing



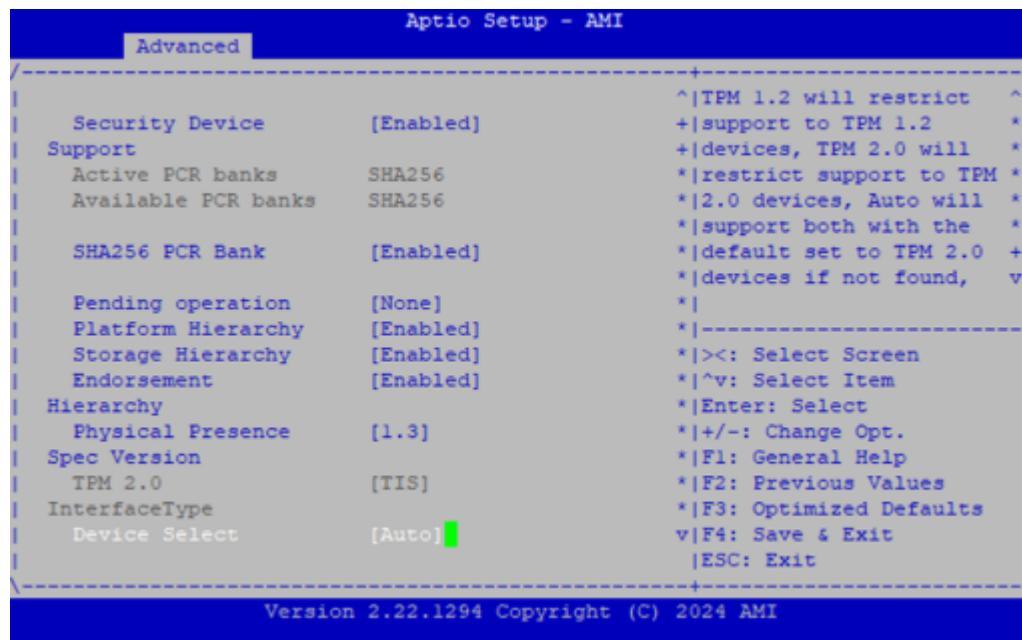

Feature	Options	Description
Security Device Support	Enabled Dis- abled	Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.
SHA256 PCR Bank	Enabled Dis- abled	Enable or Disable SHA256 PCR Bank
Pending operation	None TPM Clear	Schedule an Operation for the Security Device. NOTE: Your Computer will reboot during restart in order to change State of Security Device.
Platform Hierarchy	Enabled Dis- abled	Enable or Disable Platform Hierarchy
Storage Hierarchy	Enabled Dis- abled	Enable or Disable Storage Hierarchy
Endorsement Hierarchy	Enabled Dis- abled	Enable or Disable Endorsement Hierarchy
Physical Presence Spec Version	1.2 1.3	Select to Tell O.S. to support PPI Spec Version 1.2 or 1.3. NOTE: Some HCK tests might not support 1.3
TPM 2.0 InterfaceType	TIS	Select the Communication Interface to TPM 2.0 Device
Device Select	TPM 1.2 TPM 2.0 Auto	TPM 1.2 will restrict support to TPM 1.2 devices, TPM 2.0 will restrict support to TPM 2.0 devices, Auto will support both with the default set to TPM 2.0 devices if not found, TPM 1.2 devices will be enumerated

8.6 Super IO Configuration

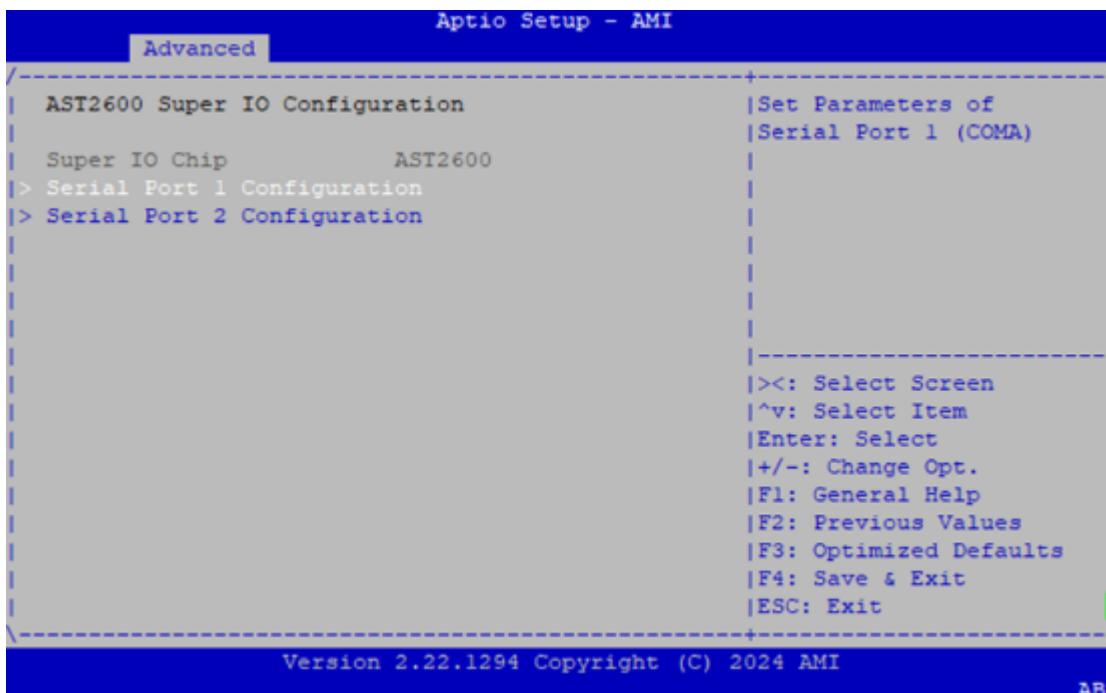


8.6.1 Serial Port 1 Configuration




Feature	Options	Description
Serial Port	Enabled Disabled	Enable or Disable Serial Port (COM)
Device Settings	IO=3F8h; IRQ = 4	N/A
Change Settings	Auto IO=3F8h; IRQ=4;IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12;IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12;IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12;	Select an optimal setting for Super IO Device

8.7 Serial Port Console Redirection

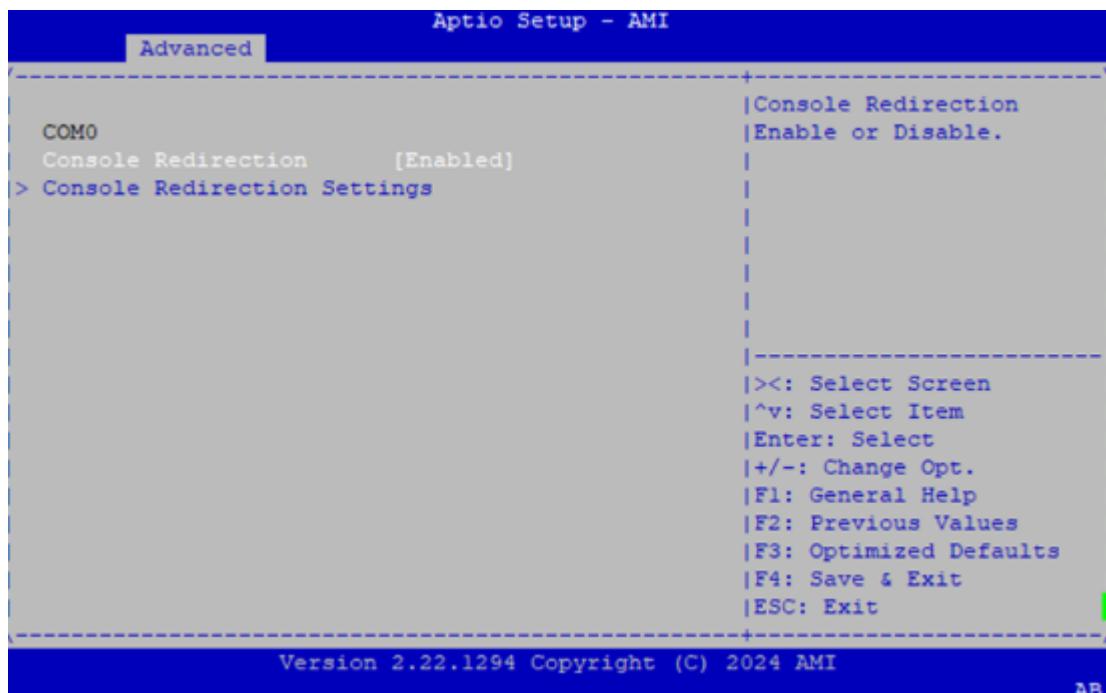


Feature	Options	Description
Console Redirection	Enabled Disabled	Console Redirection Enable or Disable

8.7.1 Console Redirection Settings

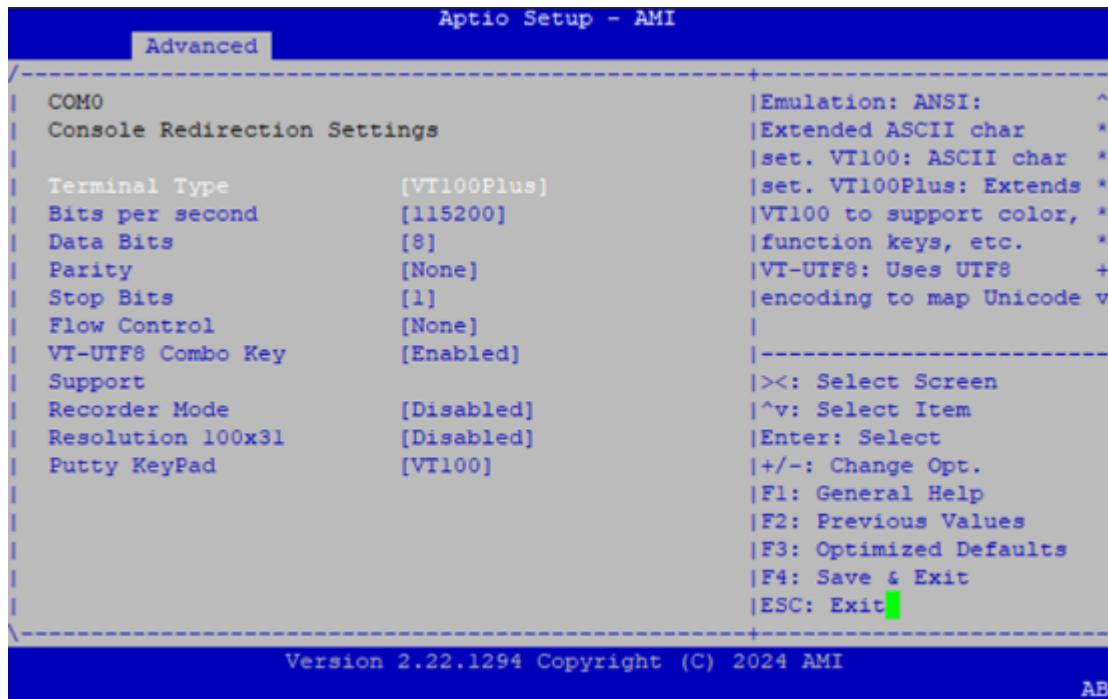


Feature	Options	Description
Terminal Type	VT100 Enabled VT-UTF8 ANSI	Emulation:ANSI: Extended ASCII char set. VT100: ASCII char set. VT100Plus: Extends VT100 to support color, function keys, etc. VT-UTF8: Uses UTF8 encoding to map Unicode chars onto 1 or more bytes.
Bits per Second	9600 19200 38400 57600 115200	Selects serial port transmission speed. The speed must be matched on the other side. Long or noisy lines may require lower speeds.
Data Bits	7 8	Data Bits
Parity	None Even Odd Mark Space	A parity bit can be sent with the data bits to detect some transmission errors. Even: parity bit is 0 if the num of 1's in the data bits is even. Odd: parity bit is 0 if num of 1's in the data bits is odd. Mark: parity bit is always 1. Space: Parity bit is always 0. Mark and Space Parity do not allow for error detection. They can be used as an additional data bit.
Stop Bits	1 2	Stop bits indicate the end of a serial data packet. (A start bit indicates the beginning). The standard setting is 1 stop bit. Communication with slow devices may require more than 1 stop bit.
Flow Control	None Hardware RTS/CTS	Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a 'stop' signal can be sent to stop the data flow. Once the buffers are empty, a 'start' signal can be sent to re-start the flow. Hardware flow control uses two wires to send start/stop signals.
VT-UTF8 Combo Key Support	Disabled Enabled	Enable VT-UTF8 Combination Key Support for ANSI/VT100 terminals.
Recorder Mode	Disabled Enabled	With this mode enabled only text will be sent. This is to capture Terminal data.
Resolution 100x31	Disabled Enabled	Enables or disables extended terminal resolution
Putty Keypad	VT100 LINUX XTERM86 SCO ESCN VT400	Selects Function Key and Keypad on Putty.


8.8 PCI Subsystem Settings

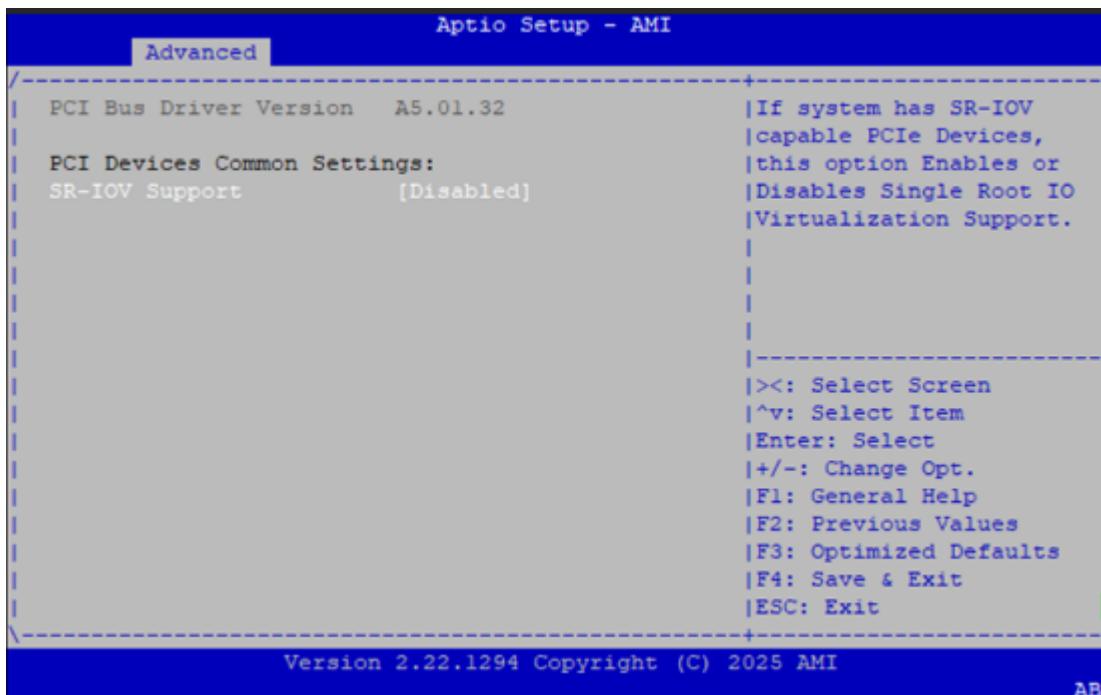

Feature	Options	Description
SR-IOV Support	Disabled Enabled	If system has SR-IOV capable PCIe Devices, this option Enables or Disables Single Root IO Virtualization Support.


8.9 USB Configuration

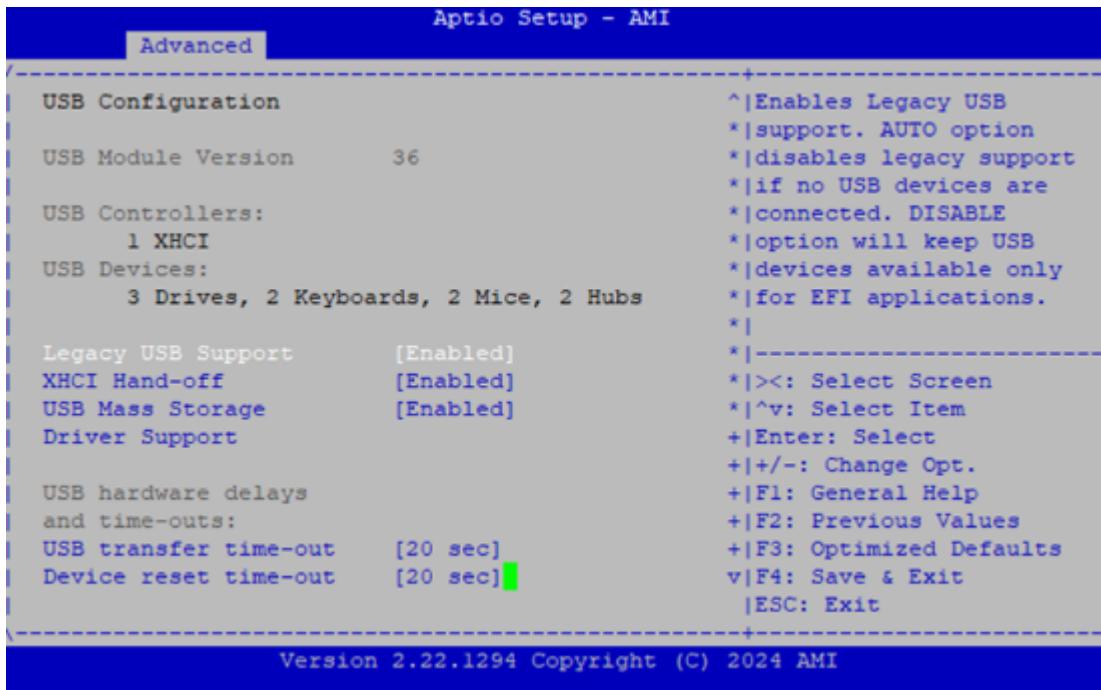

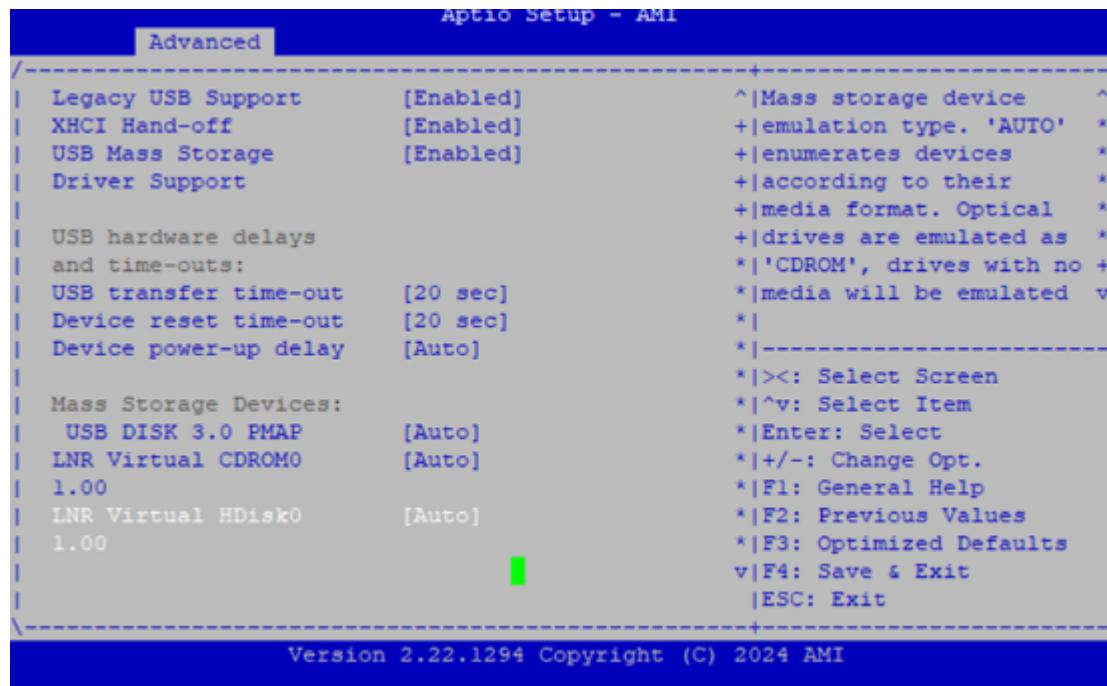

Feature	Options	Description
Legacy USB Support	Enabled Disabled	
XHCI Hand-off	Enabled Disabled	
USB Mass Storage	Enabled	
Driver Support	Disabled	
USB transfer time-out	1 sec 5 sec 10 sec 20 sec	
Device power-up delay	Auto Manual	

8.10 Network Stack Configuration

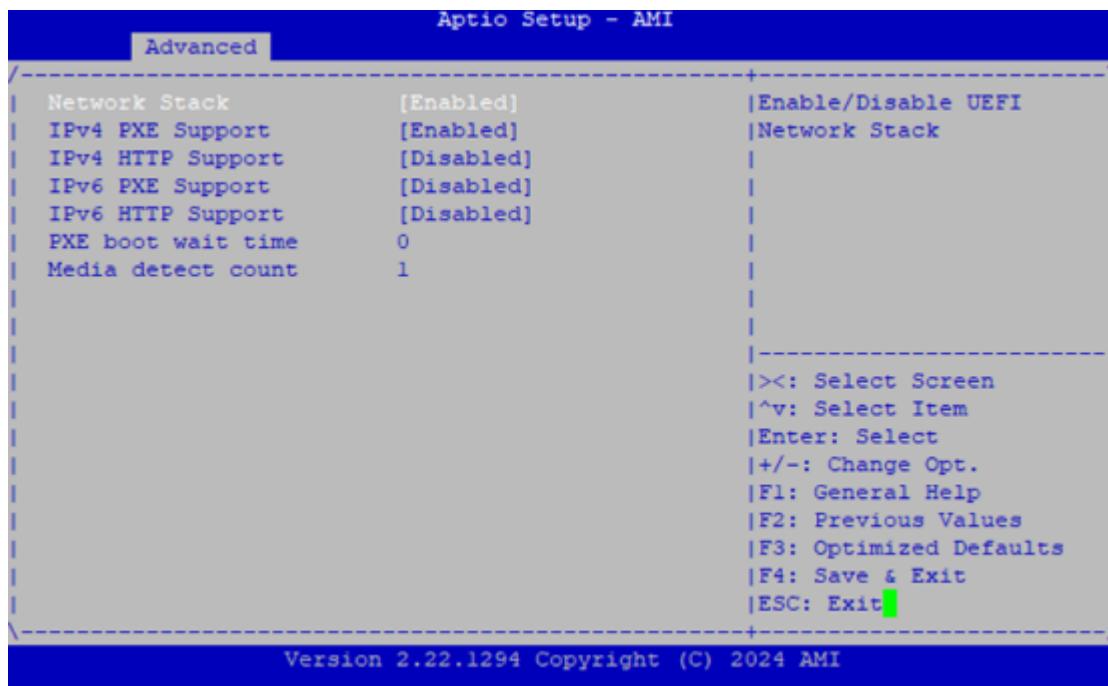


Feature	Options	Description
Network Stack	Disabled Enabled	Enables or disables UEFI Network Stack
IPv4 PXE Support	Disabled Enabled	Enable/Disable IPv4 PXE boot support. If disabled, IPv4 PXE boot support will not be available.
IPv4 HTTP Support	Disabled Enabled	Enable/Disable IPv4 HTTP boot support. If disabled, IPv4 HTTP boot support will not be available.
IPv6 PXE Support	Disabled Enabled	Enable/Disable IPv6 PXE boot support. If disabled, IPv6 PXE boot support will not be available.
IPv6 HTTP Support	Disabled Enabled	Enable/Disable IPv6 HTTP boot support. If disabled, IPv6 HTTP boot support will not be available.
PXE boot wait time	0	Wait time in seconds to press ESC key to abort the PXE boot. Use either +/- or numeric keys to set the value.
Media detect count	1	Number of times the presence of media will be checked. Use either +/- or numeric keys to set the value.

8.11 NVMe Configuration





8.12 Control PXE Boot

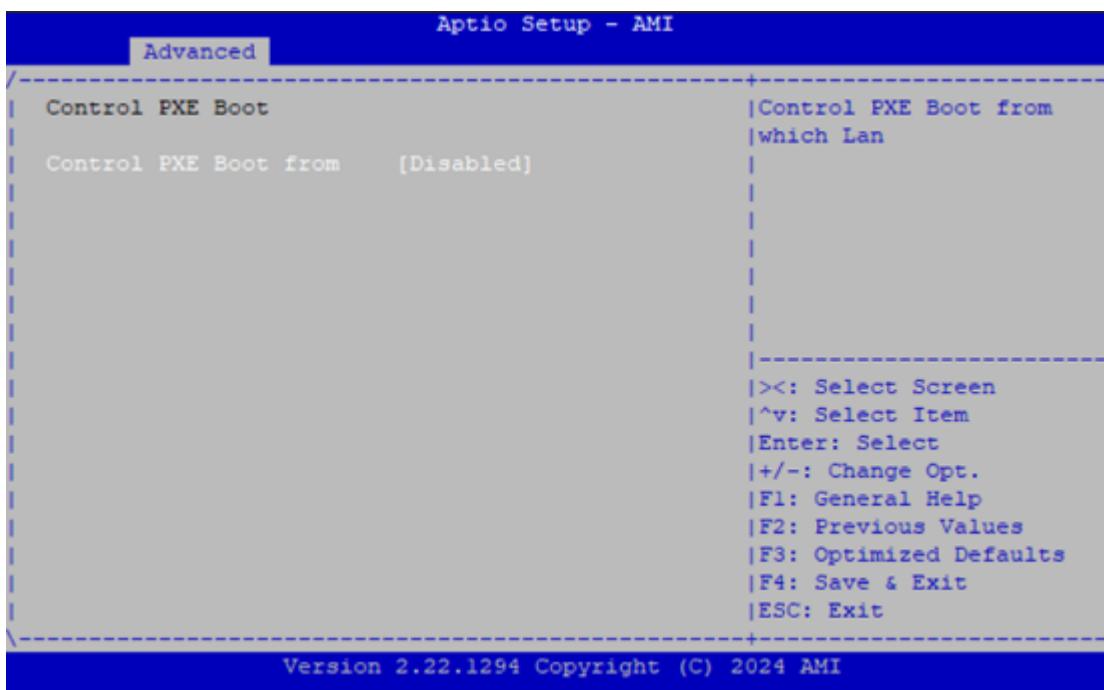


Feature	Options	Description
Control PXE Boot from	Disabled Enabled	Control PXE Boot from which Lan. Note: LAN port is set with Intel I210, the setup menu item is Enable or Disable PXE Boot function via Intel I210 LAN port.

8.13 Intel VROC

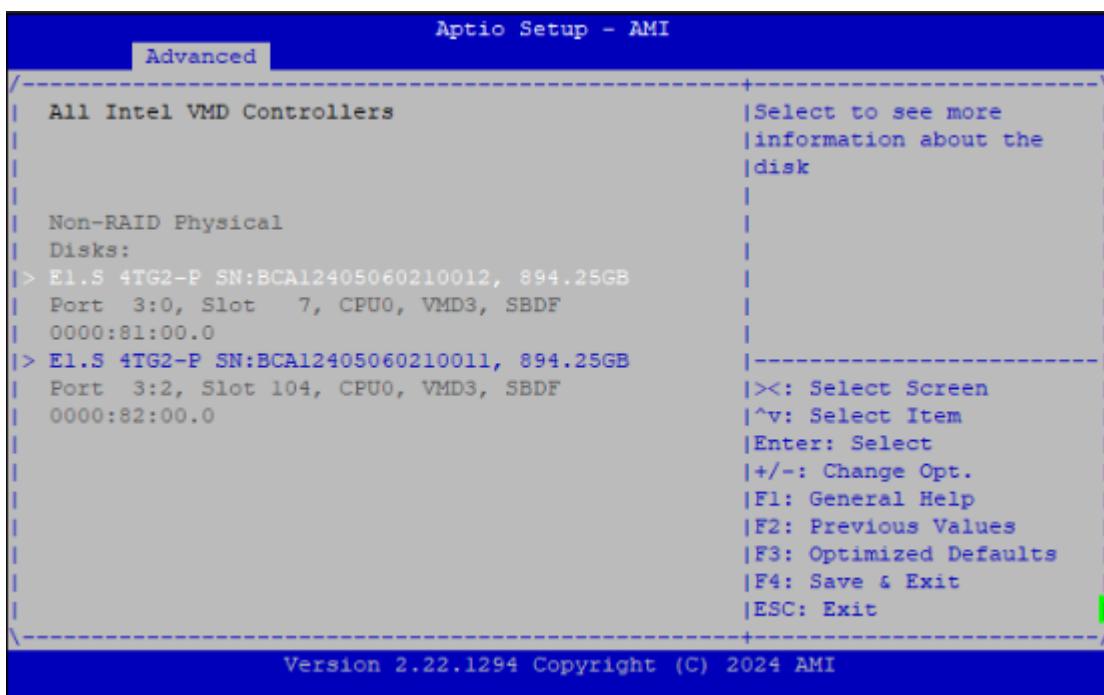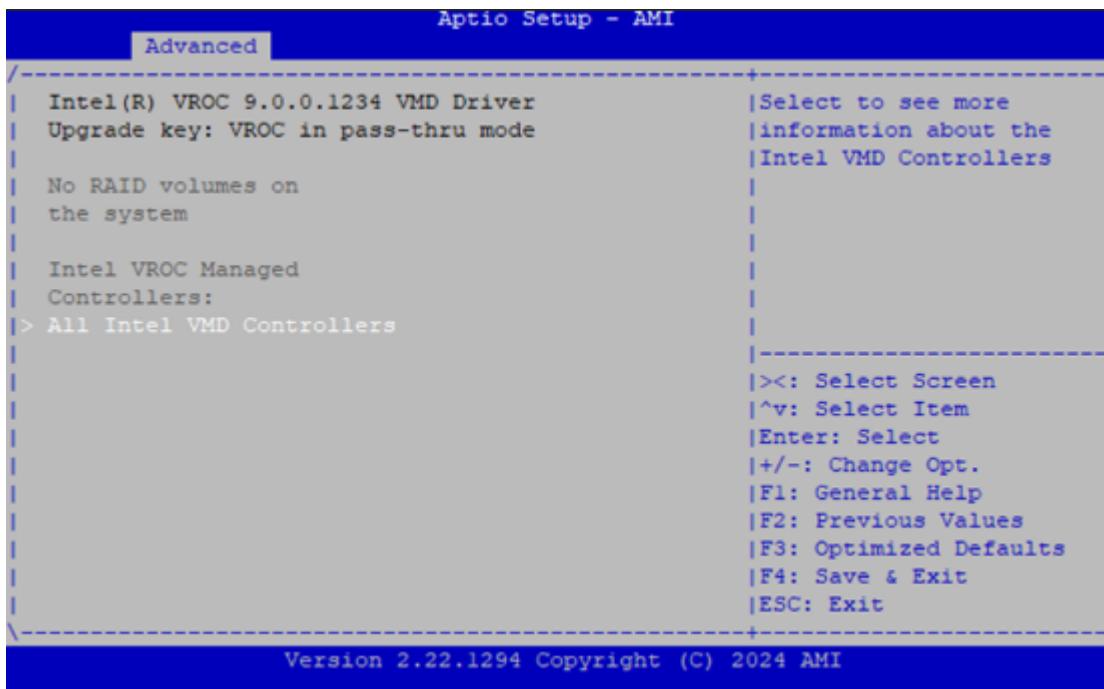


8.14 Platform Configuration

Select the Platform menu item from the BIOS setup screen to enter the Platform Setup screen. Users can select any of the items in the left frame of the screen.

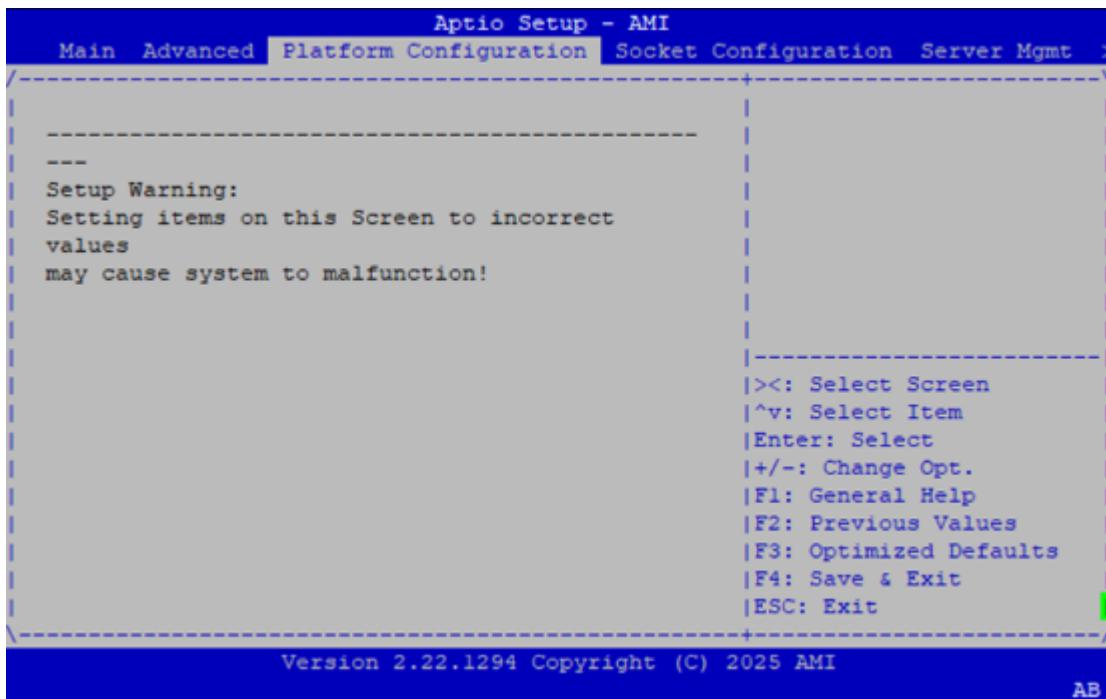


8.15 Socket Configuration

Select the Socket menu item from the BIOS setup screen to enter the Socket Setup screen. Users can select any of the items in the left frame of the screen.

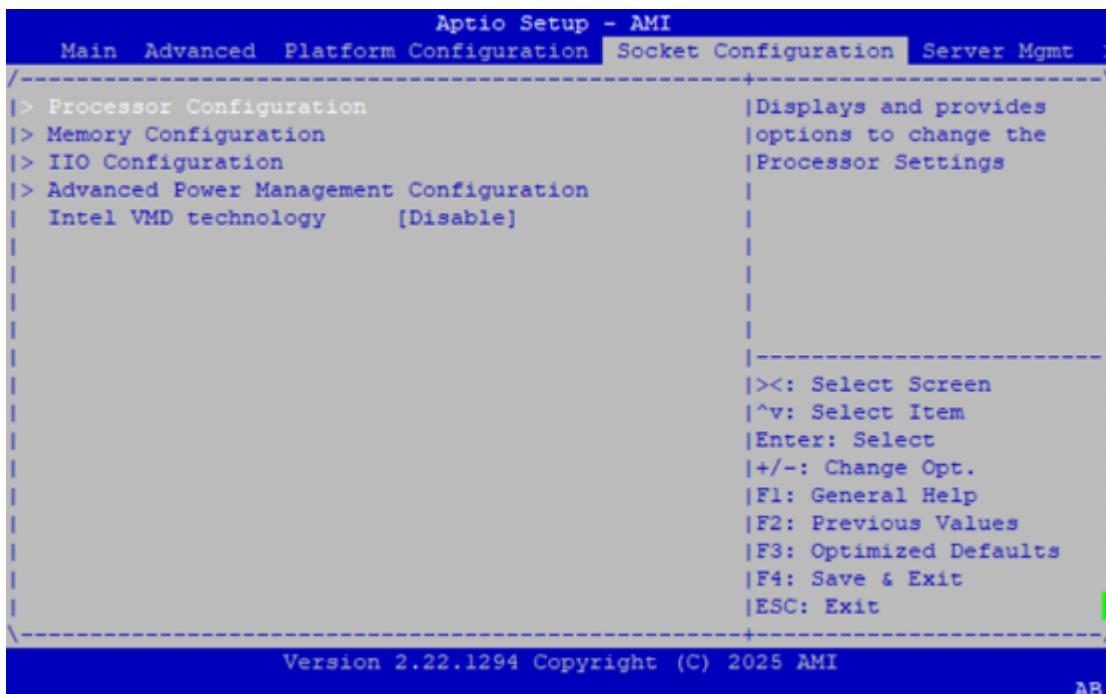

Feature	Options	Description
Processor Configuration	None	Displays and provides option to change the Processor Settings
Memory Configuration	None	Displays and provides option to change the Memory Settings
IIO Configuration	None	Displays and provides option to change the IIO Settings
Advanced Power Management Configuration	None	Displays and provides option to change the Power Management Settings
Intel VMD technology	Disable/Enable	Enable/Disable VMD this IIO Domain.


8.15.1 Processor Configuration

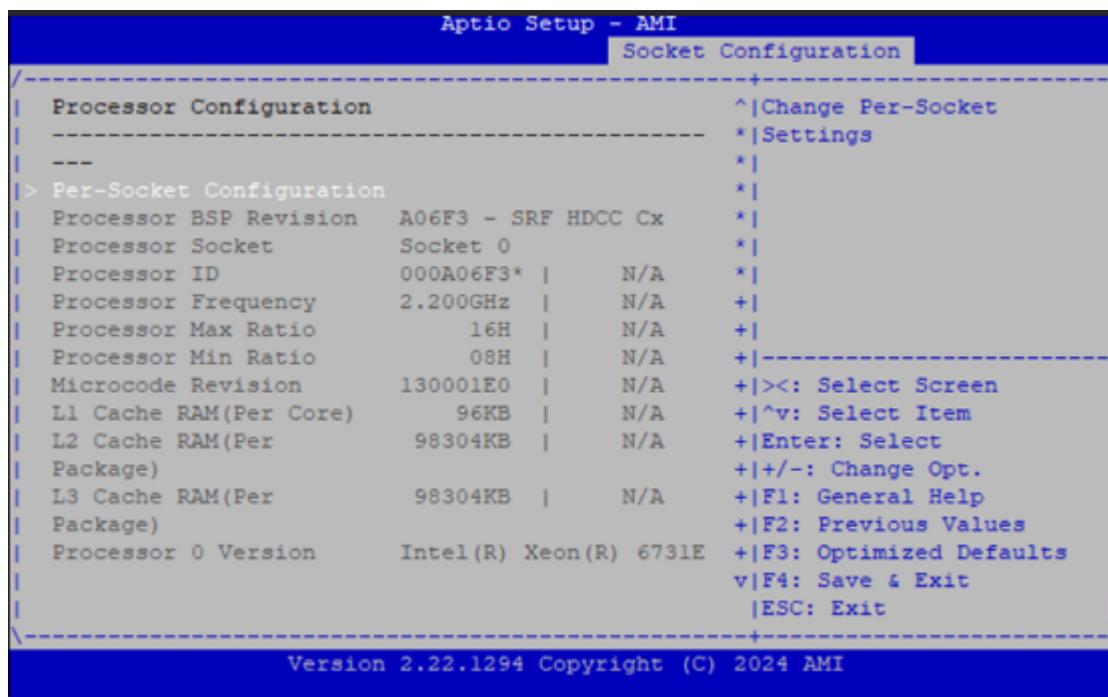




Feature	Options	Description	
Machine Check	Disabled Enabled	En-	Enable or Disable the Machine Check
Hardware Prefetcher	Disabled Enabled	En-	MLC Streamer Prefetcher (MSR 1A4h Bit [0])
Adjacent Cache Prefetcher	Disabled Enabled	En-	MLC Spatial Prefetcher (MSR 1A4h Bit [1])
APIC Physical Mode	Disabled Enabled	En-	Enable/Disable the APIC physical destination mode
Enable Intel® TXT	Disabled Enabled	En-	Enables Intel(R) TXT
VMX	Disabled Enabled	En-	Enables the Vanderpool Technology, which takes effect after re-boot.
Enable SMX	Disabled Enabled	En-	Enables Safer Mode Extensions

8.15.2 Per-Socket Configuration

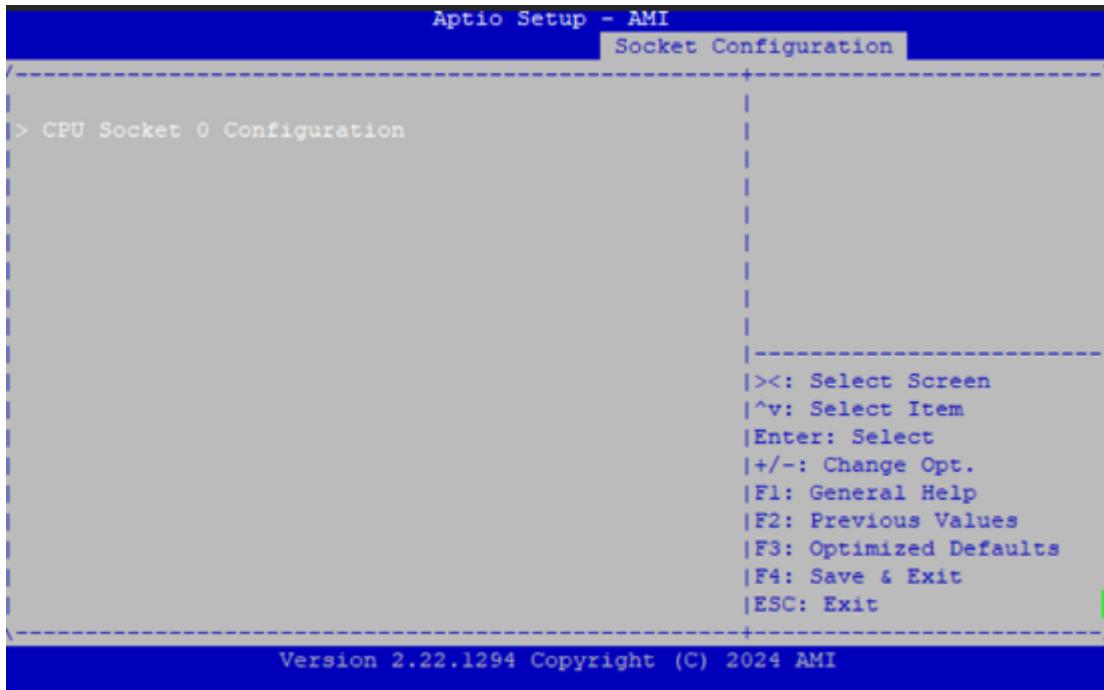


8.15.3 CPU Socket0 Configuration

Feature	Options	Description
Disable Bitmap (Hex)	0	0: Enable all cores. FFFFFFFFFF: Disable all cores least one core per CPU must be enabled. Disabling all cores is an invalid configuration.

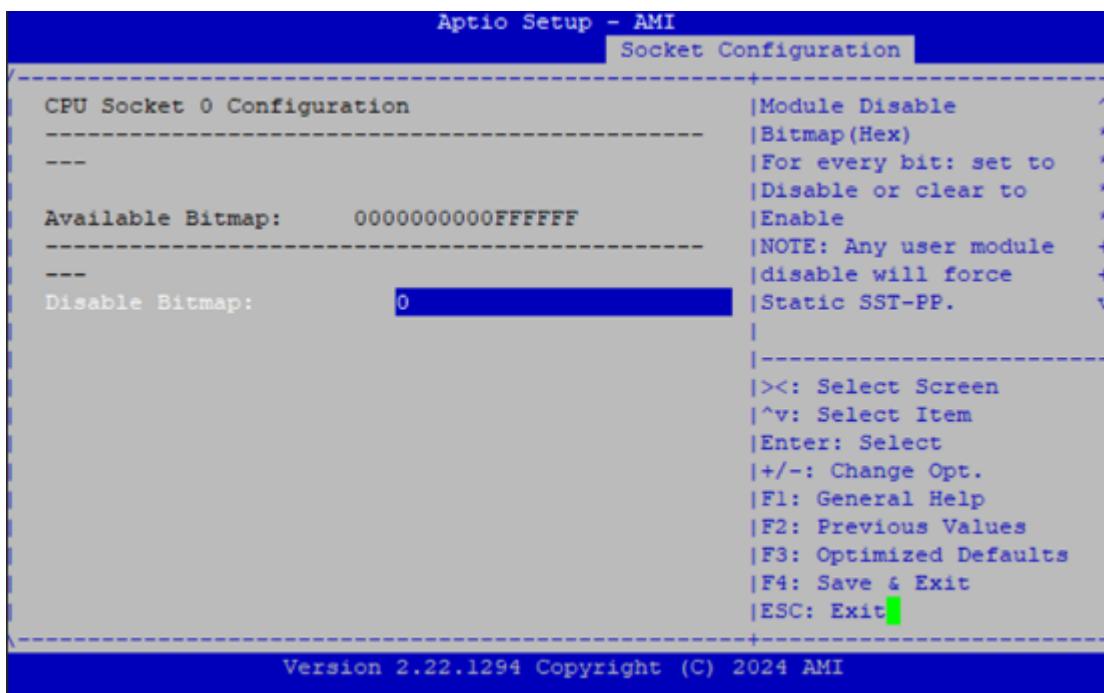


8.15.4 Memory Configuration

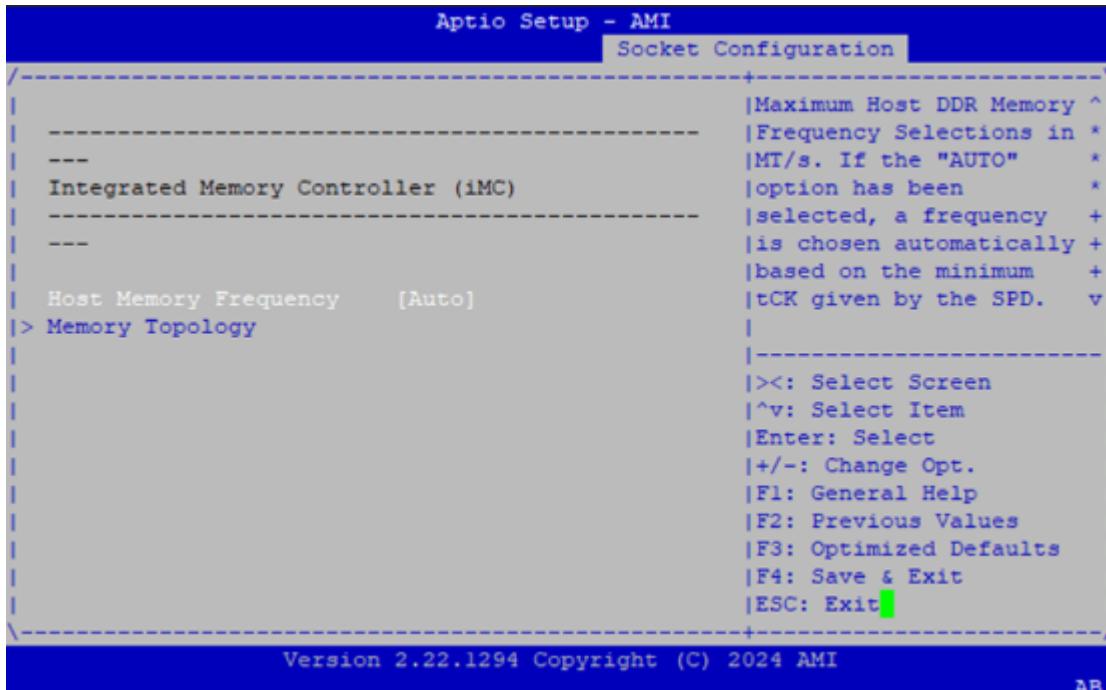

Feature	Options	Description
Host Memory Frequency	Auto 4800 5200 5600 6000 6400	Maximum Memory Frequency Selections in MT/s. If the “AUTO” option has been selected, a frequency is chosen automatically based on the minimum tCK given by the SPD. If Enforce POR is disabled, user will be able to run at higher frequencies than the memory support (limited by processor support)
Memory Topology	None	Displays memory topology with Dimm population information

8.15.5 IIO Configuration

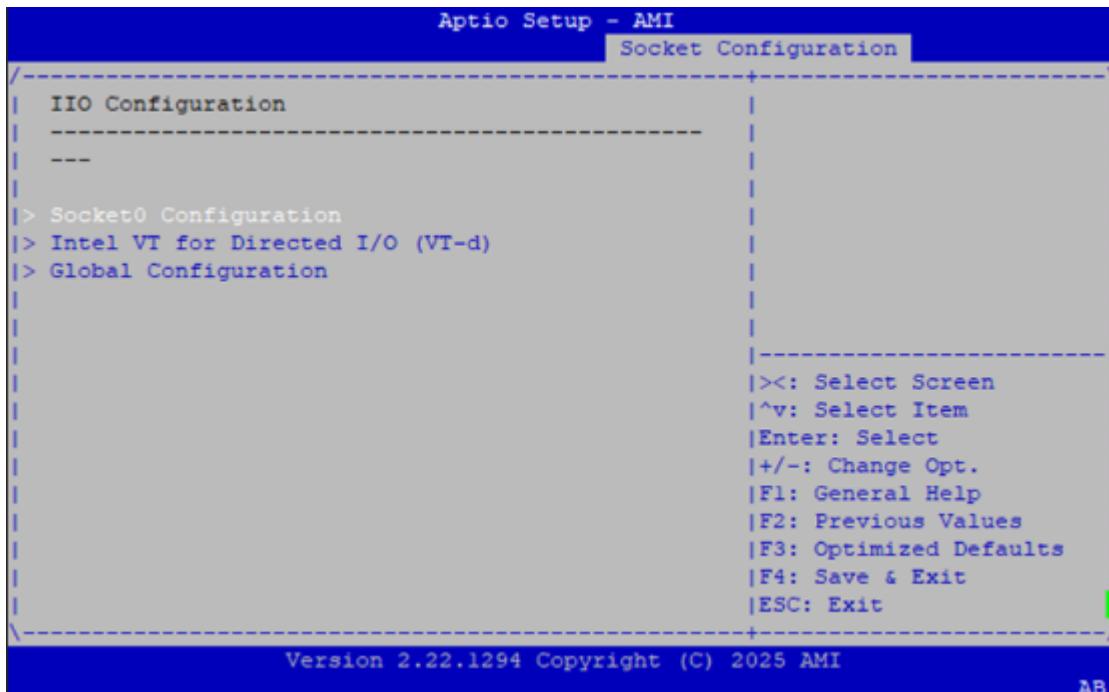


Feature	Op-tions	Description
Socket0 Configuration	None	PCI Express Root Port setting page
Intel VT for Directed I/O (VT-d)	None	Intel VT-d technology setting page. Note: If no understand setting affection, please do not change setting in page
Global Configuration	None	For all PCI Express Root Port setting page

8.15.6 Socket0 Configuration




Feature	Op- tions	Description
PCI Express 0~8	None	PCI Express 0~8 can adjust root port setting, such as bifurcation, VMD...etc. Note: Base on HW design, PCI Express 1 will affect BMC and External USB Port

8.15.7 PCI Express 0

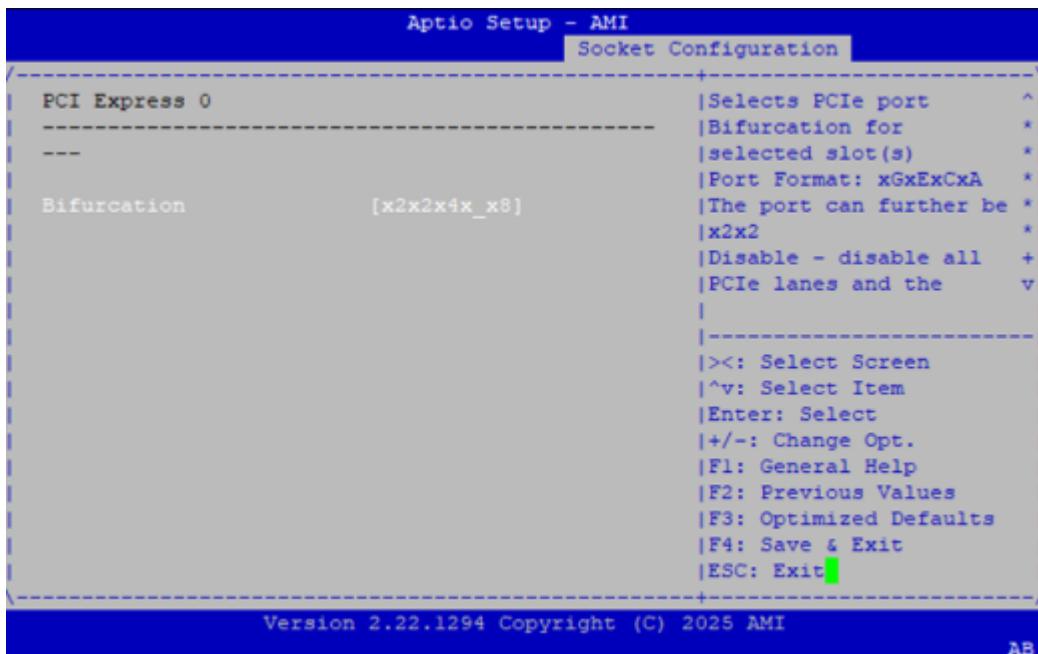


Feature	Options	Description
Bi-fur-ca-tion	Auto x4x4x4x4 x4x4x_x8 x_x8x4x4 x_x8x_x8 x_x_x_x16 x2x2x4x_x8 x4x2x2x_x8 x_x8x2x2x4 x2x2x4x4x4 x4x2x2x4x4 x4x4x2x2x4 x2x2x2x2x_x8 x2x2x2x2x4x4 x2x2x4x2x2x4 x4x2x2x2x2x4 x2x2x2x2x2x2x4 x_x8x4x2x2 x4x4x4x2x2 x_x8x2x2x2x2 x2x2x4x4x2x2 x4x2x2x4x2x2 x4x4x2x2x2x2 x2x2x2x2x4x2x2 x2x2x4x2x2x2 x4x2x2x2x2x2x2 x2x2x2x2x2x2x2x2	Selects PCIe port Bifurcation for selected slot(s): “Port Format: xGxExCxA” “The port can further be x2x2” “Disable - disable all PCIe lanes and the controller. Note: if no special device or configuration change, please do not adjust this item

8.15.8 Global Configuration

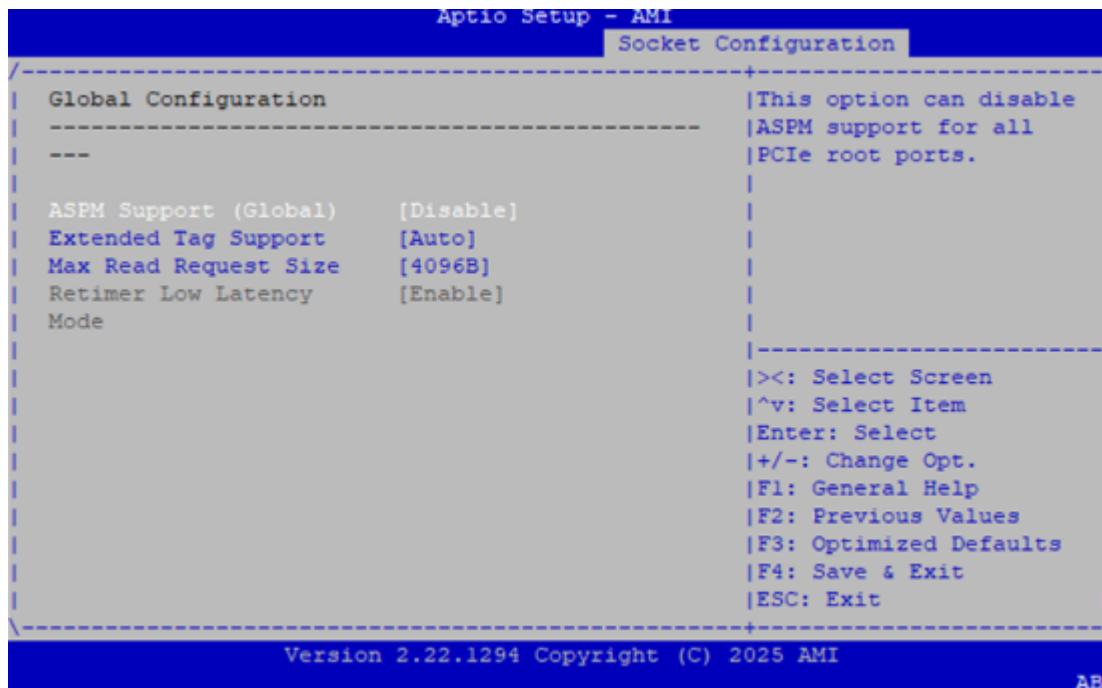



Feature	Options	Description
ASPM Support (Global)	Disable Per-port	This option can disable ASPM support for all PCIe root ports.
Extended Tag Support	Disable Auto	This option can disable 8-bit Tag support in all PCIe root ports. ‘Auto’ keeps hardware default.
Max Read Request Size	Auto 128B 256B 512B 1024B 2048B 4096B	Set Max Read Request Size in End Points

8.15.9 Advanced Power Management Configuration

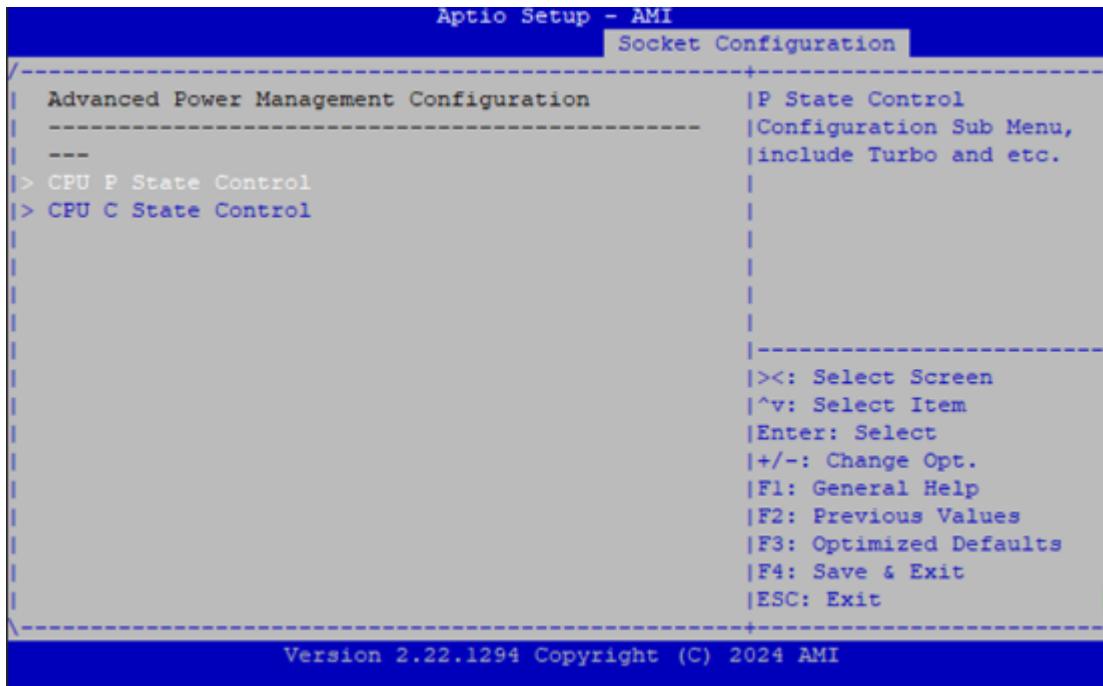


8.15.10 CPU P State Control

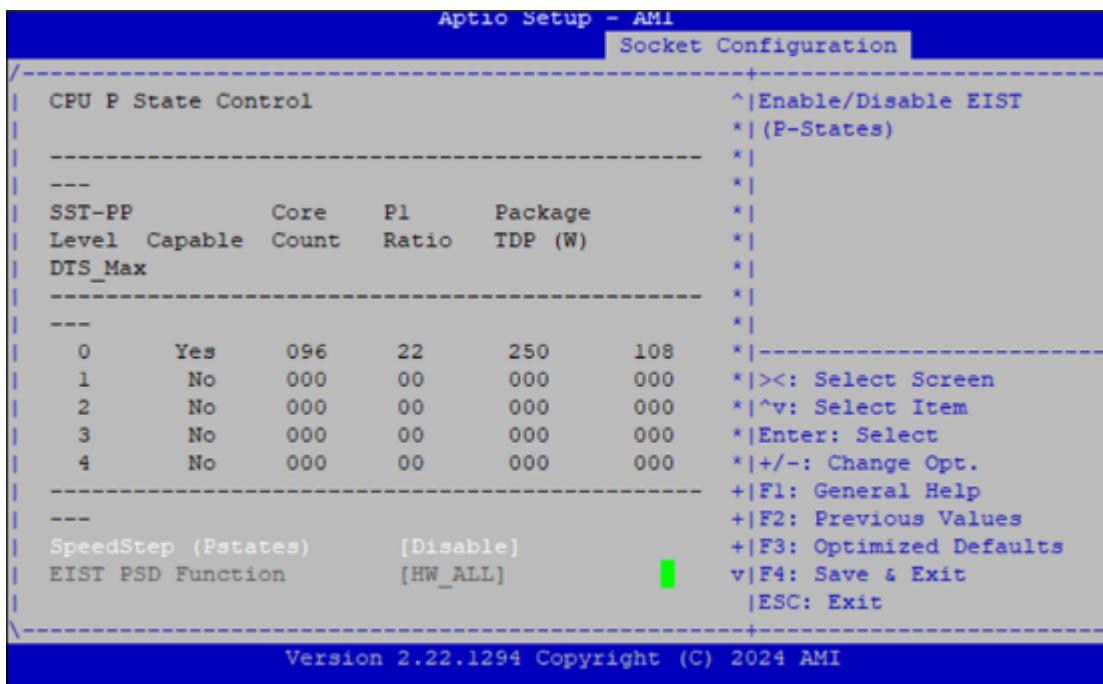

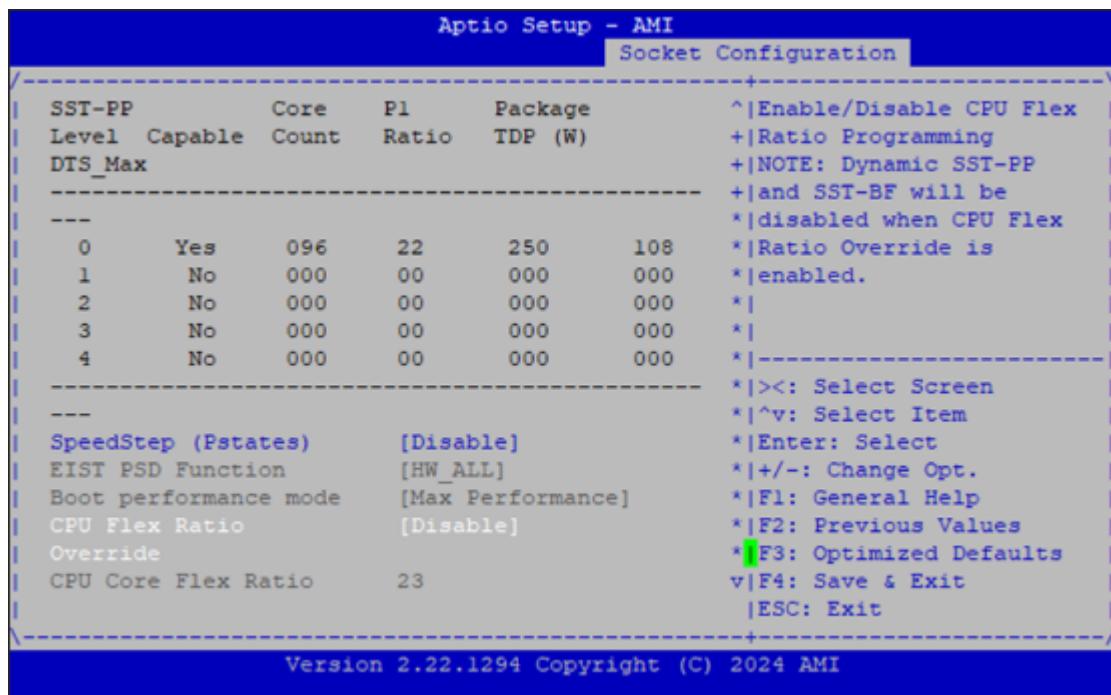


Feature	Options	Description
SpeedStep (Pstates)	Disable Enable	Enables or disables EIST (P-States).
EIST PSD Function	HW_ALL SW_ALL	Choose HW_ALL/SW_ALL in _PSD return.
Boot performance mode	Max Performance Max Efficiency	Select the performance state that the BIOS will set before OS hand off.
Turbo Mode	Disable Enable	Enable/Disable processor Turbo Mode.
Energy Efficient Turbo	Enable Disable	Enable/Disable Energy Efficient Turbo. Enable: MSR 0x1FC Bit[19] = 0 Disable: MSR 0x1FC Bit[19] = 1.
CPU Flex Ratio	Disabled	Enable/Disable CPU Flex Ratio Programming.
Override	Enabled	Note: Dynamic SST-PP and SST-BF will be disabled when CPU Flex Ratio Override is enabled.
CPU Core Flex Ratio	23	Non-Turbo Mode Processor Core Ratio Multiplier.

8.15.11 CPU C State Control

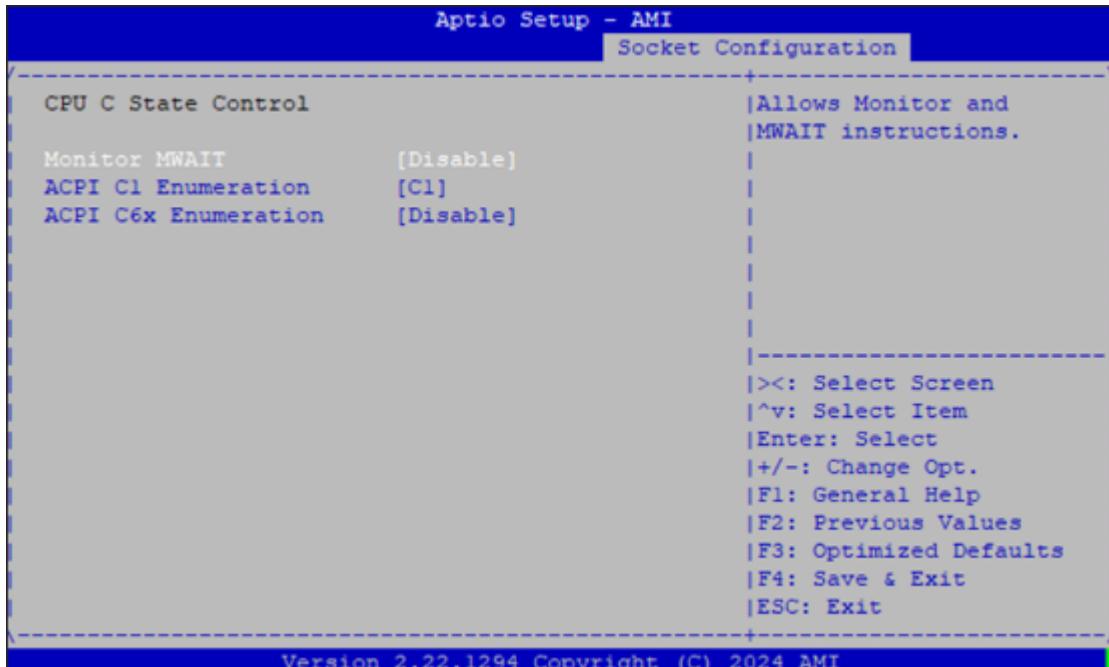


Feature	Options	Description
Monitor MWAIT	Disable Enable	Allows Monitor and MWAIT instructions.
ACPI C1 Enumeration	C1 C1e	Enumerate C1/C1e as ACPI C1.
ACPI C6x Enumeration	Disable C6S as ACPI C2 C6S as ACPI C3 C6S-P as ACPI C2 C6S-P as ACPI C3 Auto	AUTO: Maps to C6S-P as ACPI C2 Disable: Don't enumerate any C6S state in ACPI C6S as ACPI C2/C3: Enumerate C6S as ACPI C2/C3 state. PkgC6 is not allowed C6S-P as ACPI C2/C3: Enumerate C6S-P as ACPI C2/C3 state. PkgC6 is allowed.

8.16 Server Mgmt

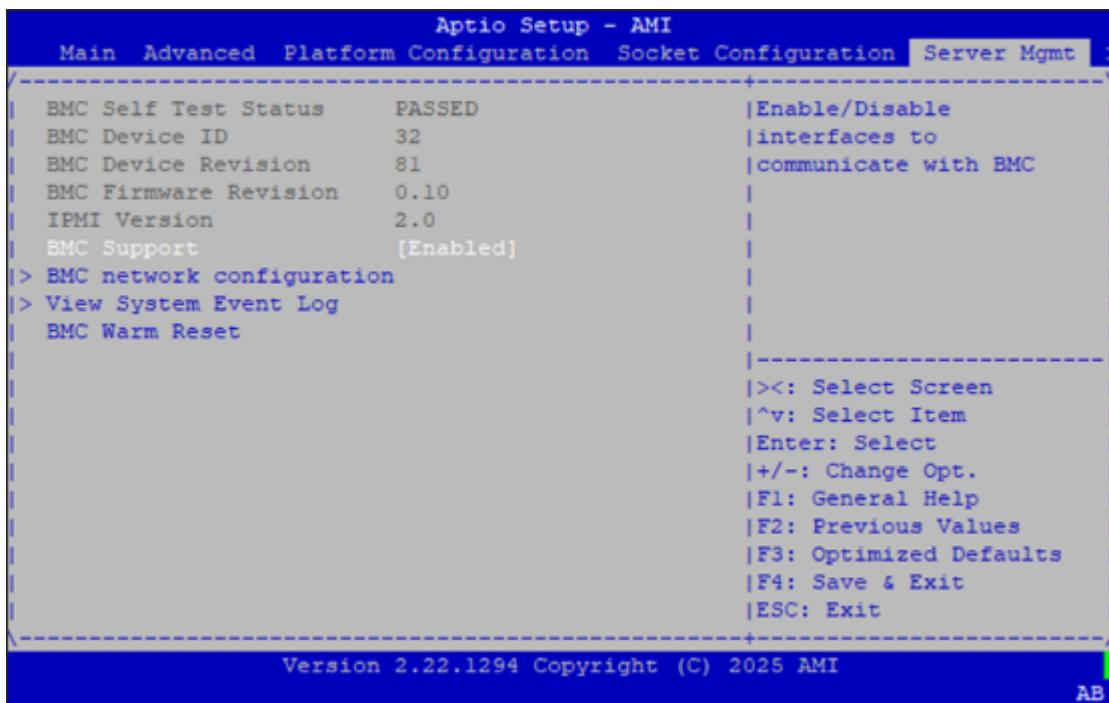



Feature	Options	Description
BMC Support	Enable Disable	Enable or disables interfaces to communicate with BMC.
BMC network configuration	NA	Configure BMC network parameters.
View System Event Log	NA	Press to view the System Event Log Records.
BMC Warm Reset	NA	Press to do Warm Reset BMC.


8.16.1 System Event Log

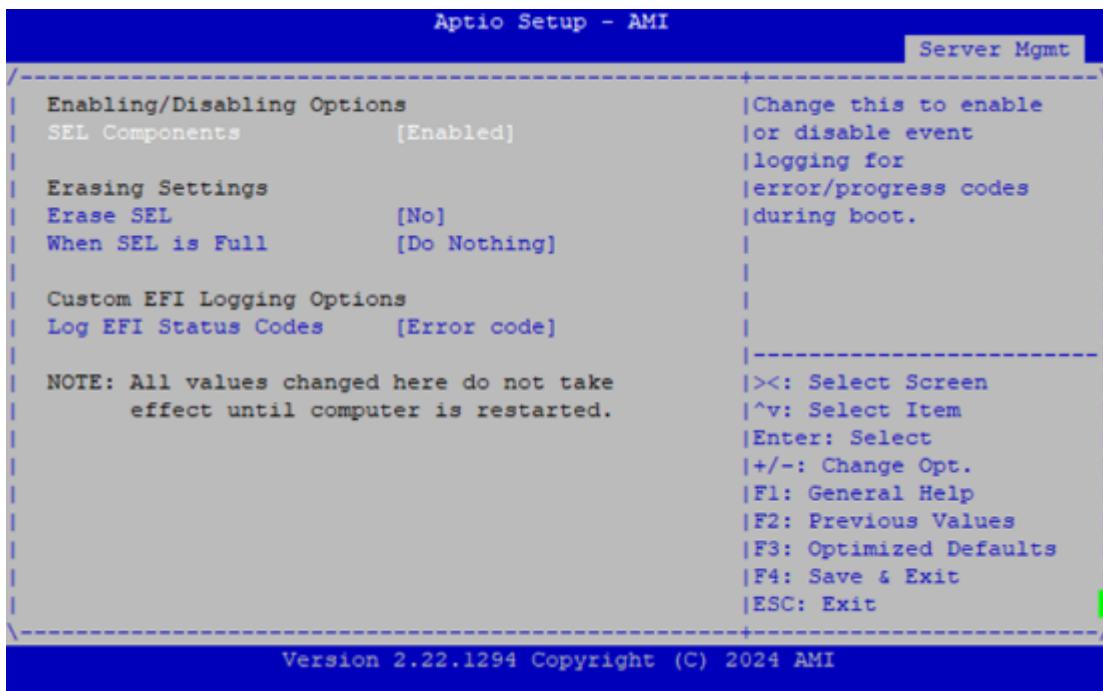

Feature	Options	Description
SEL Components	Enable Disable	Change this to enable or disable event logging for error/progress codes during boot.
Erase SEL	NO Yes, On next reset Yes, On every reset	Choose options for erasing SEL.
When SEL is Full	Do Nothing Erase Immediately Delete Oldest Record	Choose options for reactions to a full SEL.
Log EFI Status Codes	Disabled Both Error code Progress code	Disable the logging of EFI Status Codes or log only error code or only progress code or both.


8.16.2 BMC Network Configuration

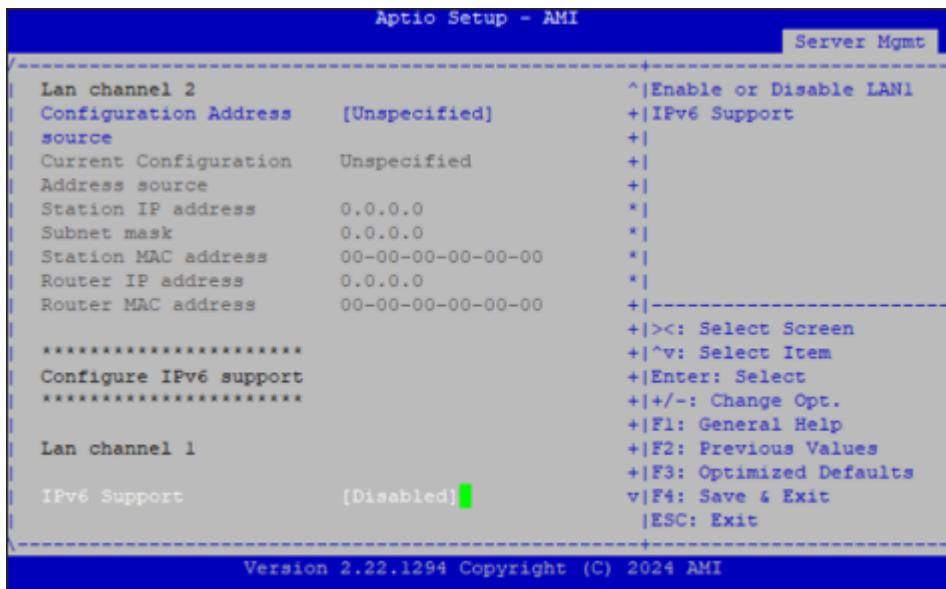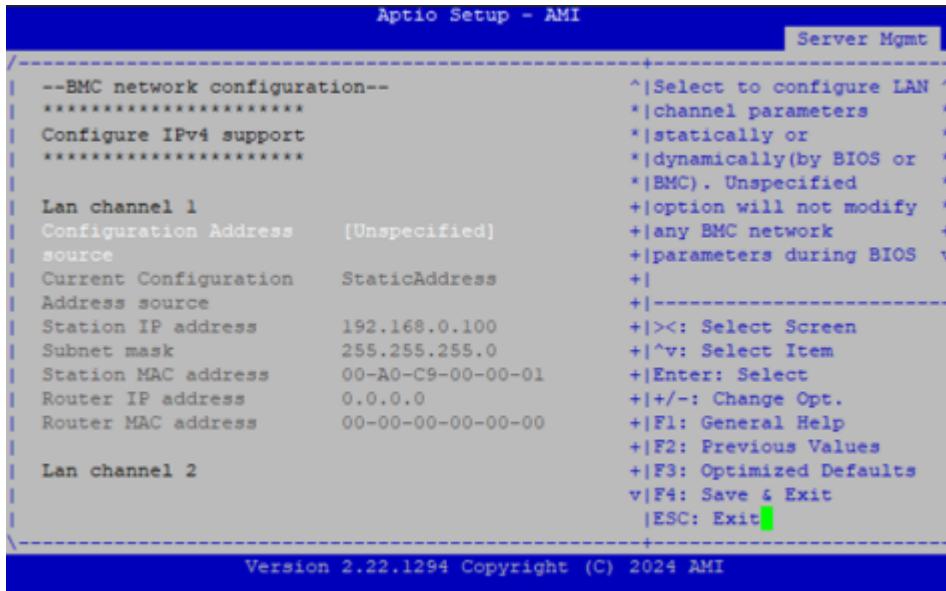

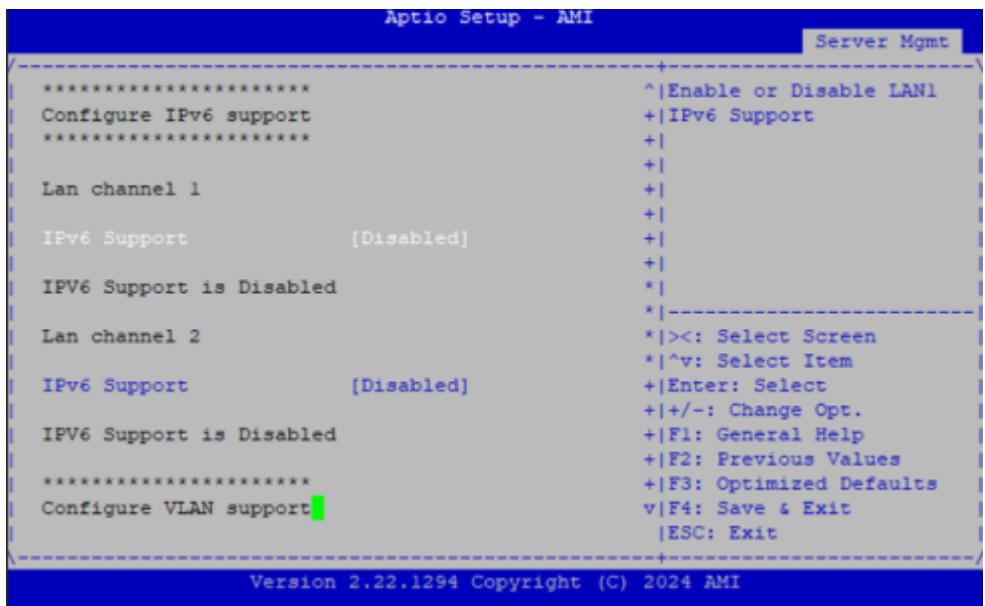


Feature	Options	Description
Configuration Address source	Unspecified Static DynamicBmcDhcp	Select to configure LAN channel parameters statically or dynamically (by BIOS or BMC). The unspecified option will not modify any BMC network parameters during BIOS phase.


8.16.3 View System Event Log

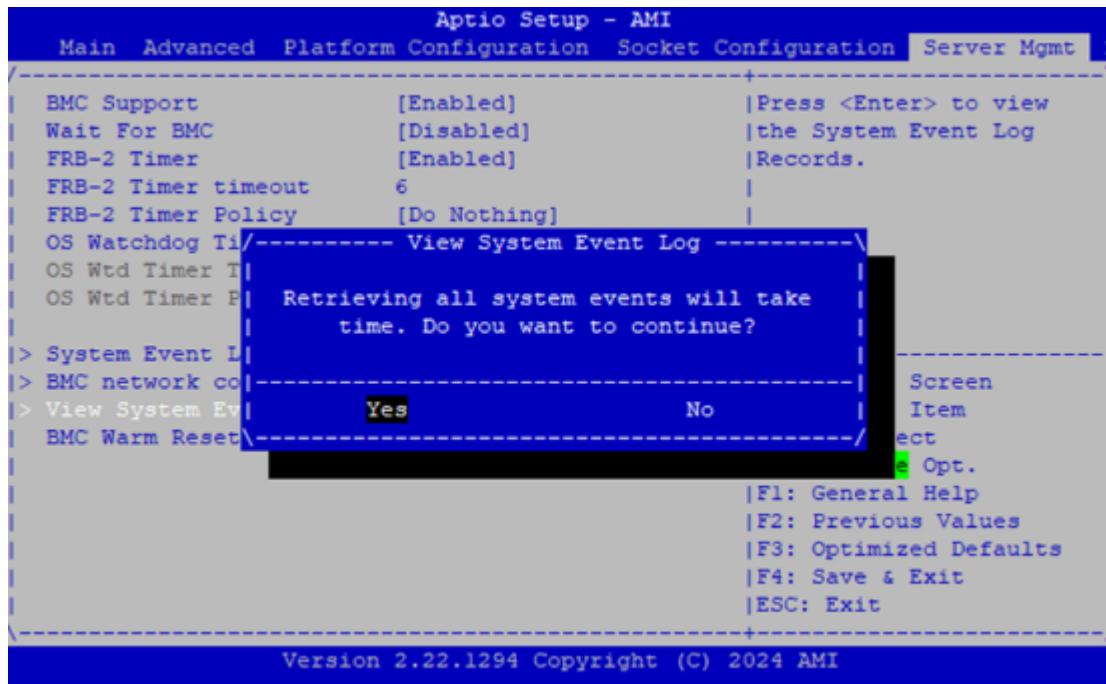

8.17 Security


Select the Security menu item from the BIOS setup screen to enter the Security Setup screen. Users can select any of the items in the left frame of the screen.

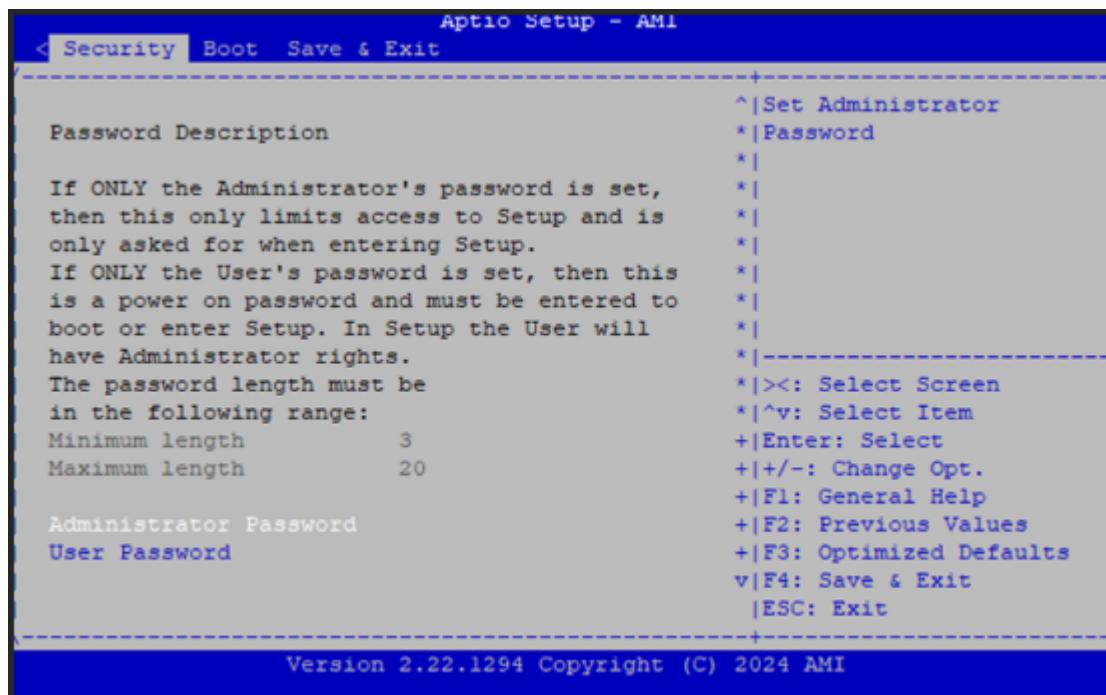

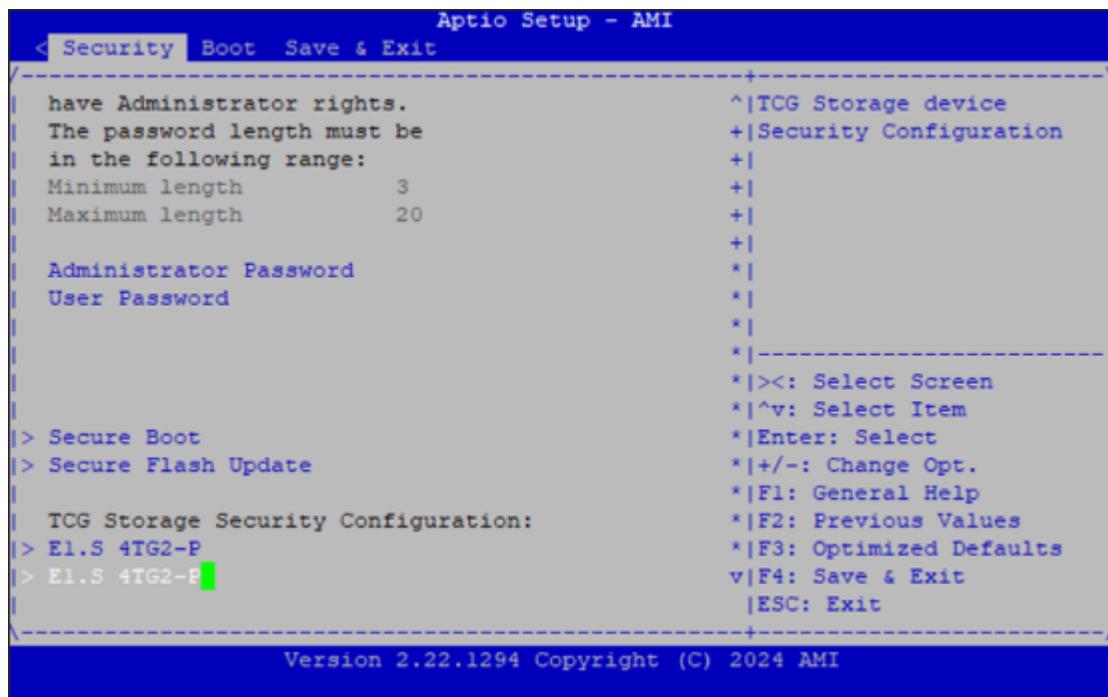

Feature	Description
Administrator Password	If ONLY the Administrator's password is set, it only limits access to Setup and is only asked for when entering Setup.
User Password	If ONLY the User's password is set, it serves as a power-on password and must be entered to boot or enter Setup. In Setup, the User will have Administrator rights.

8.17.1 Secure Boot

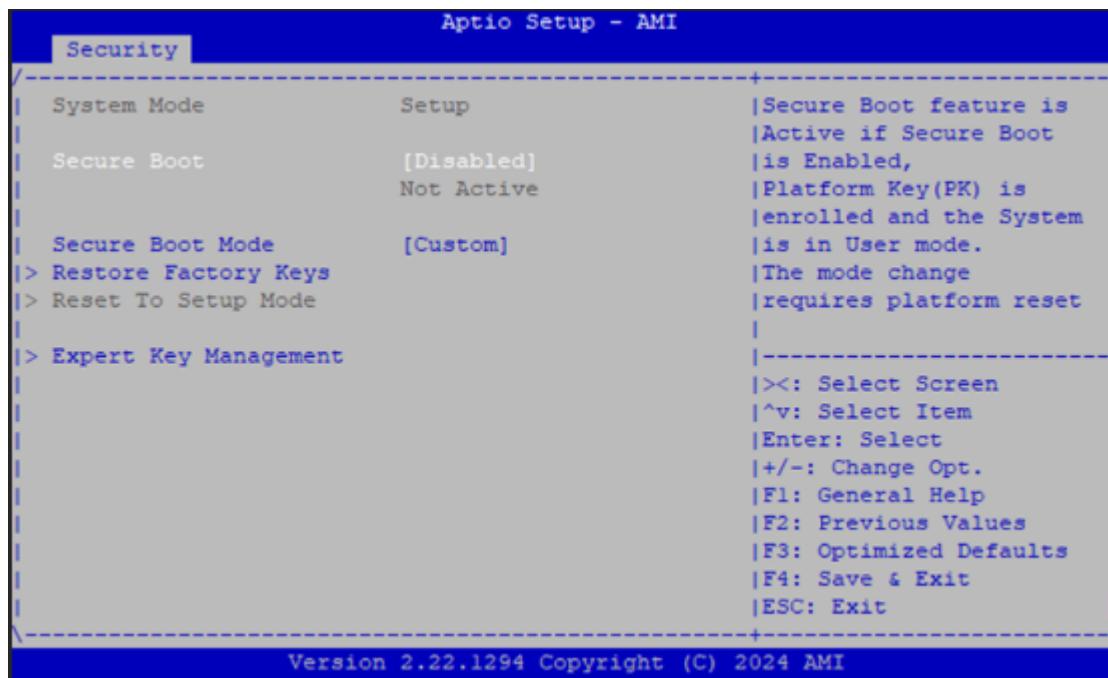

Feature	Options	Description
Secure Boot	Disable Enable	Secure Boot feature is Active if Secure Boot is Enabled, Platform Key(PK) is enrolled and the System is in User mode. The mode change requires platform reset.
Secure Boot Mode	Standard Custom	


8.17.2 Key Management



Feature	Options	Description
Factory Key Provision	Disable Enable	Install factory default Secure Boot keys after the platform reset and while the System is in Setup mode.
Restore Factory keys	None	Force System to User Mode. Install factory default Secure Boot key databases.
Enroll Efi Image	None	Allow Efi image to run in Secure Boot mode. Enroll SHA256 Hash certificate of a PE image into Authorized Signature Database (db).

8.18 Boot Menu

Select the Boot menu item from the BIOS setup screen to enter the Boot Setup screen. Users can select any of the items in the left frame of the screen.

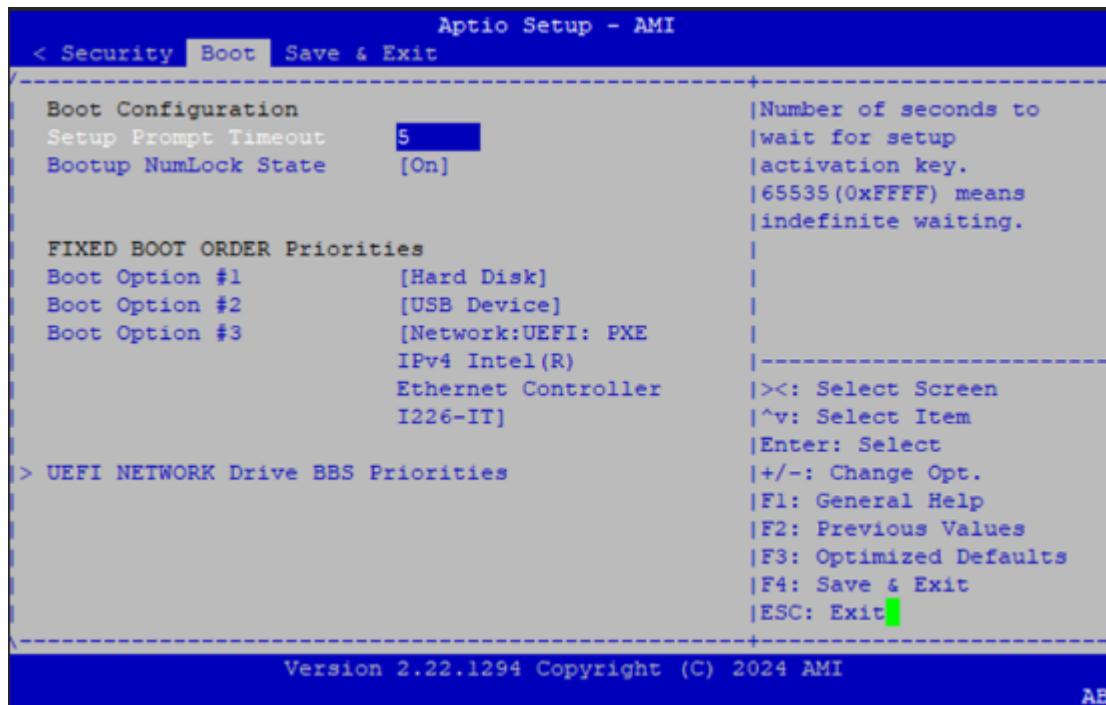


Feature	Op-tions	Description
Setup Prompt Timeout	5	Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.
Bootup NumLock State	On Off	Select the keyboard NumLock state

- Choose boot priority from boot option group.
- Choose specific boot device priority sequence from available Group device.


8.19 Save and Exit Menu

Select the Save and Exit menu item from the BIOS setup screen to enter the Save and Exit Setup screen. Users can select any of the items in the left frame of the screen.

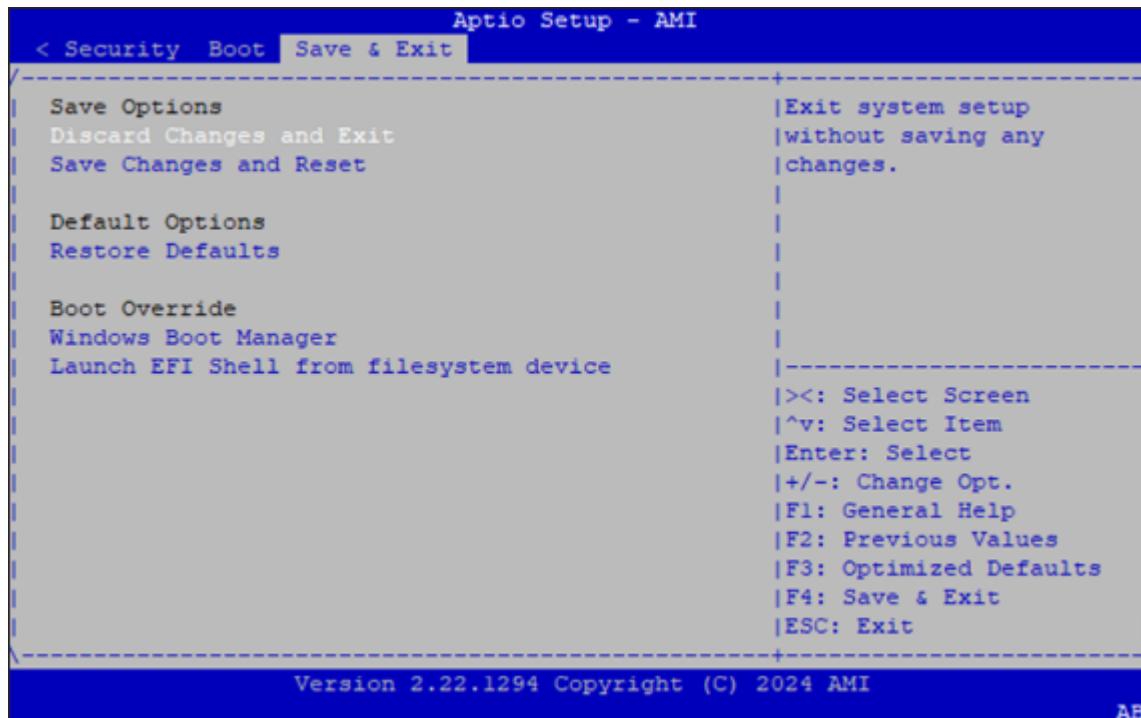


8.19.1 Discard Changes and Exit

- Select this option to quit Setup without saving any modifications to the system configuration. The following window will appear after the “Discard Changes and Exit” option is selected. Select “Yes” to discard changes and Exit Setup.

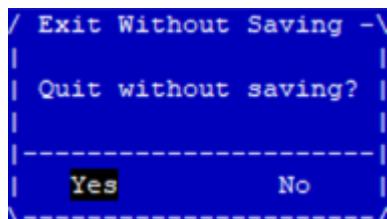


8.19.2 Save Changes and Reset

- When Users have completed the system configuration changes, select this option to save the changes and reset from BIOS Setup in order for the new system configuration parameters to take effect. The following window will appear after selecting the “Save Changes and Reset” option is selected. Select “Yes” to Save Changes and reset.

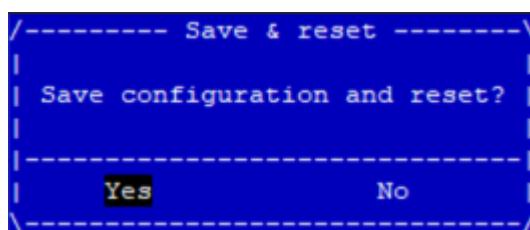

8.19.3 Restore Defaults

- Restore default values for all setup options. Select “Yes” to load Optimized defaults.

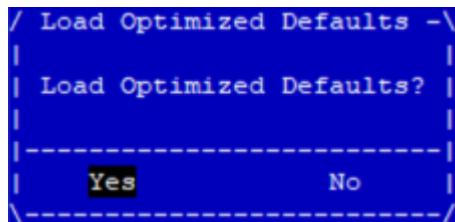

Note: The items under Boot Override may not be the same as the image above, as it should depend on the actual devices connect to the system.

8.20 Intel® RAID Key Configuration

8.20.1 Configuring Intel VMD and Creating a RAID Volume


Step 1: Install the VROC Key

1. Connect the VROC key to the motherboard's JRAID_CON1 header.


![alt text](Pics/VROC Key.png)

Step 2: Boot into BIOS

1. Boot into BIOS à Navigate to Socket Configuration and set Intel VMD Technology to Enabled

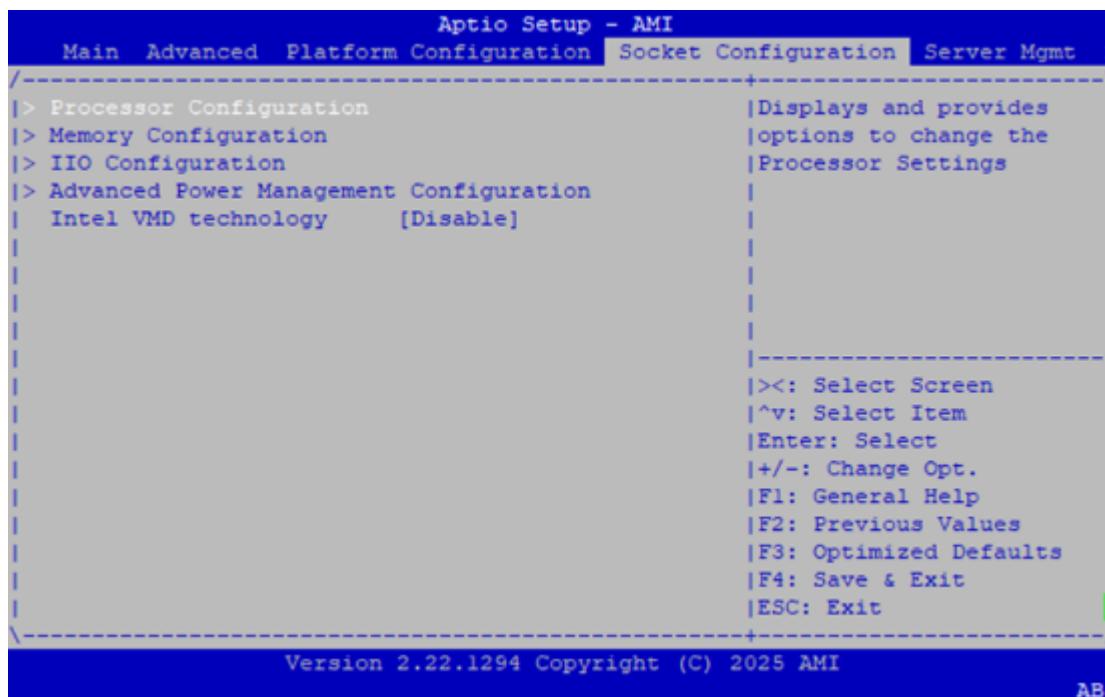


2. Save & Exit: Choose Save Changes and Reset to reboot the system.

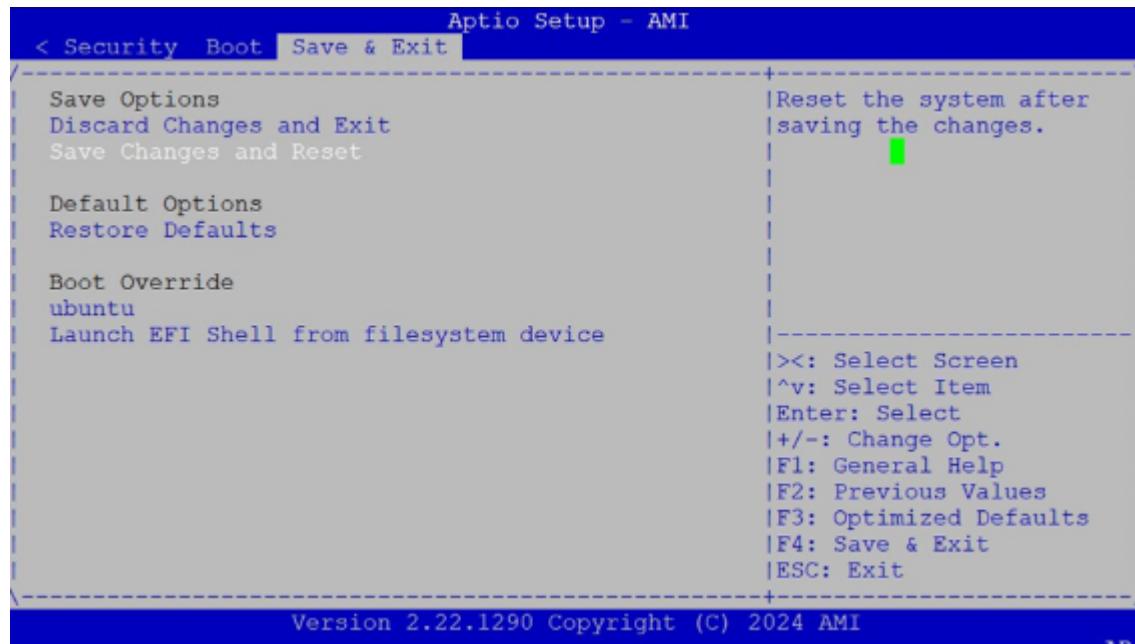

Step 3: Re-enter BIOS

1. After reboot, enter BIOS again.
2. Navigate to Advanced > Intel Virtual RAID on CPU > All Intel VMD Controllers.

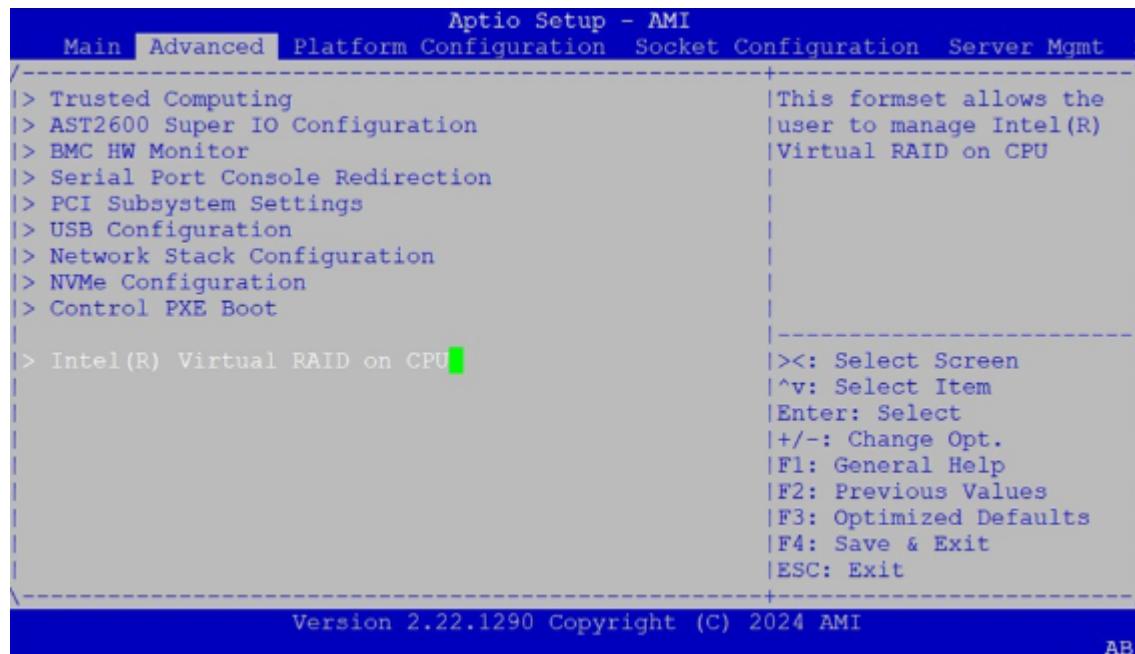

3. Select Create RAID Volume, then choose the desired RAID Level.
4. Select the storage devices to include in the RAID array.
5. Click Create Volume, then confirm with Yes.
6. Exit BIOS.

Step 4: Boot into the OS

Use the command `lsblk` to verify the RAID volume. It will appear as `/dev/mdxxx`